


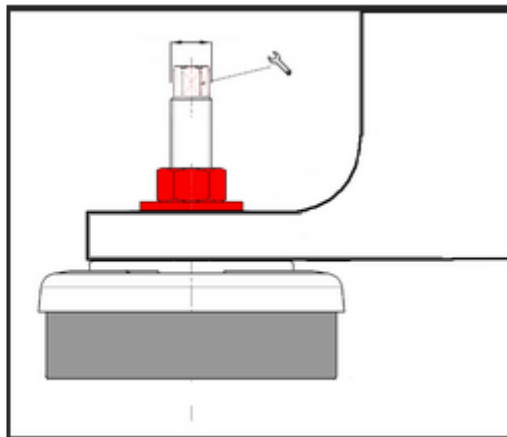


1. Remove the locking nut and washer



2. The screw goes through the hole and the machine leans on the red disk



3. Apply the nut/washer and tighten it.

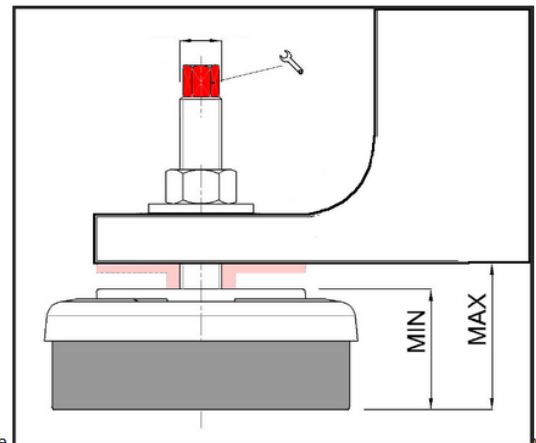

4. Level the machine by acting on the hexagon at the top of the screw. The disk will raise