


技術資料 Technische Documentatie **Documentation**
Documentação técnica Documentación técnica Documentazione tecnica
Technische Dokumentation Technical Documentation Техническая документация
Documentazione tecnica Technische documentatie
Техническая документация **Teknik Doküman** 技术资料
Documentazione tecnica Dokumentacja techniczna
Technische documentatie Documentación técnica 技術資料
기술 자료 Technische documentatie 技術資料
Documentation technique Teknik Doküman Dokumentacja techniczna
Technical Documentation **Documentazione tecnica** Technical Documentation
Dokumentacja techniczna 技术资料 Documentation technique
Техническая документация Technische Dokumentation **Teknik Doküman**
Dokumentacja techniczna Technische documentatie
Documentation technique 기술 자료 Dokumentacja techniczna

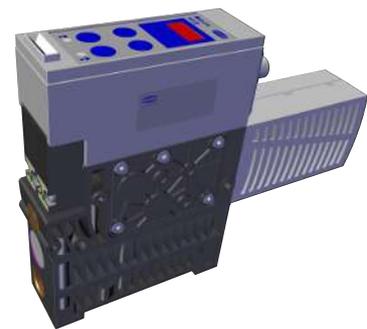

SXMPi IO-Link Class B

Operating Instructions

Note

The Operating instructions were originally written in German. Store in a safe place for future reference. Subject to technical changes without notice. No responsibility is taken for printing or other types of errors.

Published by

© J. Schmalz GmbH, 09/19

This document is protected by copyright. J. Schmalz GmbH retains the rights established thereby. Reproduction of the contents, in full or in part, is only permitted within the limits of the legal provisions of copyright law. Any modifications to or abridgments of the document are prohibited without explicit written agreement from J. Schmalz GmbH.

Contact

J. Schmalz GmbH
Johannes-Schmalz-Str. 1
72293 Glatten, Germany
T: +49 7443 2403-0
schmalz@schmalz.de
www.schmalz.com

Contact information for Schmalz companies and trade partners worldwide can be found at:
www.schmalz.com/salesnetwork

Contents

| | | |
|----------|--|-----------|
| 1 | Important information | 6 |
| 1.1 | Note on Using this Document | 6 |
| 1.2 | The technical documentation is part of the product | 6 |
| 1.3 | Warnings in This Document | 6 |
| 1.4 | Symbol | 6 |
| 2 | Fundamental Safety Instructions | 7 |
| 2.1 | Standards of Technology | 7 |
| 2.2 | Emissions | 7 |
| 2.3 | Intended Use | 7 |
| 2.4 | Non-Intended Use | 7 |
| 2.5 | Personnel Qualification | 8 |
| 2.6 | Modifications to the Ejector | 8 |
| 3 | Product Description | 9 |
| 3.1 | Description of the Mini Compact Valve | 9 |
| 3.1.1 | Suction of the Workpiece (Vacuum Generation) | 9 |
| 3.1.2 | Depositing the Workpiece/Part (Blowing Off) | 10 |
| 3.1.3 | Product Highlights | 10 |
| 3.2 | Operating Modes | 10 |
| 3.3 | Ejector Designation | 10 |
| 3.4 | Ejector Structure | 12 |
| 3.5 | Controls and Displays in Detail | 13 |
| 4 | Technical Data | 16 |
| 4.1 | Display Parameters | 16 |
| 4.2 | General Parameters | 16 |
| 4.3 | Electrical Parameters | 16 |
| 4.4 | Mechanical Data | 17 |
| 4.4.1 | Performance Data | 17 |
| 4.4.2 | Factory Settings | 17 |
| 4.4.3 | Dimensions | 18 |
| 4.4.4 | Maximum Torque | 19 |
| 4.4.5 | Pneumatic circuit plans | 20 |
| 5 | Operating and Menu Concepts | 21 |
| 5.1 | Button Assignments in Display Mode | 21 |
| 5.1.1 | Opening the Menu | 21 |
| 5.1.2 | Displaying the Operating Mode and Supply Voltages (Slide Show) | 22 |
| 5.1.3 | Displaying the System Pressure | 22 |
| 5.1.4 | Displaying the vacuum/pressure unit | 22 |
| 5.2 | Main Menu | 22 |
| 5.2.1 | Functions in the Main Menu | 22 |
| 5.2.2 | Changing the Parameters of the Main menu | 23 |
| 5.3 | Configuration Menu | 23 |
| 5.3.1 | Functions in the Configuration Menu | 23 |
| 5.3.2 | Changing the Parameters of the Configuration Menu | 24 |
| 5.4 | System Menu | 25 |
| 5.4.1 | Functions in the System Menu | 25 |
| 5.4.2 | Viewing Data in the System Menu | 25 |

| | | |
|----------|---|-----------|
| 6 | Interfaces | 26 |
| 6.1 | Basic Principles of IO-Link Communication..... | 26 |
| 6.2 | Process Data | 26 |
| 6.3 | ISDU Parameter Data | 26 |
| 6.4 | Near Field Communication (NFC) | 27 |
| 7 | Description of Functions | 28 |
| 7.1 | Overview of Functions | 28 |
| 7.2 | Operating Modes | 29 |
| 7.2.1 | Automatic Operation | 29 |
| 7.2.2 | Manual Mode | 29 |
| 7.2.3 | Setting Mode | 30 |
| 7.2.4 | Restricted Mode..... | 31 |
| 7.3 | Monitoring the System Vacuum and Pressure and Defining Limit Values | 31 |
| 7.4 | Calibrating the Sensors [0x0002] | 32 |
| 7.5 | Control Functions [P-0: 0x0044]..... | 32 |
| 7.5.1 | No Control (Continuous Suction)..... | 32 |
| 7.5.2 | Control | 33 |
| 7.5.3 | Control with Leak Monitoring..... | 33 |
| 7.5.4 | Control Shutoff [P-0: 0x004E] | 33 |
| 7.6 | Blow-Off modes [0x0045] | 33 |
| 7.6.1 | Externally controlled blow-off..... | 33 |
| 7.6.2 | Internally Time-Controlled Blow-Off..... | 33 |
| 7.6.3 | Externally Time-Controlled Blow-Off | 34 |
| 7.6.4 | Setting the Blow-Off time [P-0: 0x006A]..... | 34 |
| 7.7 | Selecting a Display Unit [0x004A]..... | 34 |
| 7.8 | Switch-Off Delay [0x004B] | 34 |
| 7.9 | Rotating the Display [0x004F]..... | 35 |
| 7.10 | ECO Mode [0x004C]..... | 35 |
| 7.11 | Locking and Unlocking the Menus..... | 35 |
| 7.11.1 | PIN Code [0x004D] | 35 |
| 7.11.2 | Unlocking the Menus | 36 |
| 7.11.3 | Restricting Access Using Device Access Locks [0x000C] | 36 |
| 7.11.4 | Restricting Access with Extended Device Access Locks [0x005A] | 37 |
| 7.12 | Resetting to Factory Settings (Clear All) [0x0002] | 37 |
| 7.13 | Counters..... | 38 |
| 7.14 | Displaying the Software Version [0x0017]..... | 39 |
| 7.15 | Displaying the Serial Number [0x0015]..... | 39 |
| 7.16 | Displaying the Part Number [0x00FA]..... | 39 |
| 7.17 | Production setup profiles..... | 39 |
| 7.18 | Energy and Process Control (EPC)..... | 40 |
| 7.18.1 | Condition Monitoring (CM) [0x0092] | 40 |
| 7.18.2 | Energy Monitoring (EM) [0x009B, 0x009C, 0x009D]..... | 43 |
| 7.18.3 | Predictive Maintenance (PM) | 43 |
| 7.18.4 | Reading the EPC Values | 44 |
| 8 | Transport and Storage | 45 |
| 8.1 | Checking the Delivery | 45 |
| 9 | Installation | 46 |
| 9.1 | Installation Instructions..... | 46 |
| 9.2 | Installation | 46 |

| | | |
|-----------|--|-----------|
| 9.3 | Pneumatic connection..... | 49 |
| 9.3.1 | Connecting the Compressed Air and Vacuum | 50 |
| 9.3.2 | Instructions for the Pneumatic Connection | 51 |
| 9.4 | Operation Using IO-Link Class B | 51 |
| 9.5 | Electrical Connection..... | 52 |
| 9.5.1 | Pin Assignment of M12 connector for IO-Link Class B | 52 |
| 10 | Operation | 54 |
| 10.1 | General Preparations | 54 |
| 10.2 | Changing the Blow-Off Flow Rate on the Ejector..... | 54 |
| 11 | Troubleshooting..... | 55 |
| 11.1 | Help with Malfunctions | 55 |
| 11.2 | Error Codes, Causes and Solutions | 56 |
| 11.3 | System condition monitoring (CM) | 57 |
| 12 | Maintenance..... | 58 |
| 12.1 | Safety | 58 |
| 12.2 | Cleaning the Ejector..... | 58 |
| 12.3 | Replacing the Silencer..... | 58 |
| 12.4 | Replacing the Press-In Screens..... | 58 |
| 12.5 | Replacement of the Device with a Parameterization Server | 58 |
| 13 | Warranty..... | 60 |
| 14 | Spare and wearing parts, accessories | 61 |
| 14.1 | Spare and Wearing Parts | 61 |
| 14.2 | Accessories | 61 |
| 15 | Decommissioning and Recycling..... | 62 |
| 15.1 | Disposing of the Ejector | 62 |
| 15.2 | Materials Used | 62 |
| 16 | EC Declaration of Conformity | 63 |
| 17 | Appendix | 64 |
| 17.1 | Overview of Display Codes | 64 |

1 Important information

1.1 Note on Using this Document

J. Schmalz GmbH is generally referred to as Schmalz in these Operating instructions.

These Operating instructions contain important notes and information about the different operating phases of the product:

- Transport, storage, start of operations and decommissioning
- Safe operation, required maintenance, rectification of any faults

The Operating instructions describe the product at the time of delivery by Schmalz.

1.2 The technical documentation is part of the product

1. For problem-free and safe operation, follow the instructions in the documents.
2. Keep the technical documentation in close proximity to the product. The documentation must be accessible to personnel at all times.
3. Pass on the technical documentation to subsequent users.
 - ⇒ Failure to follow the instructions in these Operating instructions may result in life-threatening injuries!
 - ⇒ Schmalz is not liable for damage or malfunctions that result from failure to heed these instructions.

If you still have questions after reading the technical documentation, contact Schmalz-service at:

www.schmalz.com/services

1.3 Warnings in This Document

Warnings warn against hazards that may occur when handling the product. This document contains three levels of danger that you can recognize by the signal word.

| Signal word | Meaning |
|-------------|--|
| WARNING | Indicates a medium-risk hazard which, if not avoided, could result in death or serious injury. |
| CAUTION | Indicates a low-risk hazard which, if not avoided, could result in minor or moderate injury. |
| NOTE | Indicates a danger that leads to property damage. |

1.4 Symbol



This sign indicates useful and important information.

- ✓ This symbol represents a prerequisite that must be met prior to an operational step.
- ▶ This sign represents an action to be performed.
- ⇒ This sign represents the result of an action.

Actions that consist of more than one step are numbered:

1. First action to be performed.
2. Second action to be performed.

2 Fundamental Safety Instructions

2.1 Standards of Technology

The ejector is built in accordance with the latest standards of technology and is shipped safely, however, hazards can arise during use.



⚠ WARNING

Failure to follow the instructions in this manual can lead to life-threatening injuries!

- ▶ Read the operating instructions carefully and observe the contents.

2.2 Emissions

The ejector emits noise due to the operation of compressed air.



⚠ WARNING

Noise pollution due to the escape of compressed air

Hearing damage!

- ▶ Wear ear protectors.
- ▶ The ejector must only be operated with a silencer.

2.3 Intended Use

The ejector is designed to generate a vacuum for gripping and transporting objects when used in conjunction with suction cups. Operation is via a controller using IO-Link class B.

Neutral gases are approved as evacuation media. Neutral gases include air, nitrogen and inert gases (e.g. argon, xenon and neon).

The product is intended for industrial use.

Intended use includes the observance of the technical data and the installation and operating instructions in this manual.

2.4 Non-Intended Use



⚠ WARNING

Extraction of hazardous media, liquids or bulk material

Personal injury or damage to property!

- ▶ Do not extract harmful media such as dust, oil mists, vapors, aerosols etc.
- ▶ Do not extract aggressive gases or media such as acids, acid fumes, bases, biocides, disinfectants or detergents.
- ▶ Do not extract liquids or bulk materials, e.g. granulates.

Schmalz accepts no liability for damages caused by non-intended usage of the ejector.

In particular, the following are considered non-intended use:

- Filling pressurized containers, driving cylinders, valves or other pressure-operated functional elements
- Use in potentially explosive atmospheres

- Use in medical applications
- Lifting people or animals
- Evacuation of objects that are in danger of imploding
- Ballistic applications

2.5 Personnel Qualification

Unqualified personnel cannot recognize dangers and are therefore exposed to higher risks!

1. Only instruct qualified personnel to perform the tasks described in this manual.
2. The product may only be operated by persons who have undergone appropriate training.
3. Electrical work and installations may only be carried out by qualified electrical specialists.
4. Assembly and maintenance work may only be carried out by qualified personnel.

The following target groups are addressed in this manual:

- Installers who are trained in handling the product and can operate and install it
- Technically trained service personnel performing the maintenance work
- Technically trained persons who work on electrical equipment

2.6 Modifications to the Ejector

Schmalz assumes no liability for consequences of modifications over which it has no control:

1. The ejector must be operated only in its original condition as delivered.
2. Use only original spare parts from Schmalz.
3. The ejector must be operated only in perfect condition.

3 Product Description

3.1 Description of the Mini Compact Valve

3.1.1 Suction of the Workpiece (Vacuum Generation)

The ejector is designed for vacuum handling of parts in combination with suction systems. The vacuum is generated in a nozzle according to the Venturi principle, i.e. by using suction generated by the flow of accelerated compressed air. Compressed air is channeled into the ejector and flows through the nozzle. A vacuum is generated immediately downstream of the motive nozzle; this causes the air to be sucked through the vacuum connection. The air and compressed air that have been removed by the suction exit together via the silencer.


The venturi nozzle on the ejector is activated and deactivated using the suction command:

- In the NO (normally open) variant, the venturi nozzle is deactivated when the suction signal is received.
- In the NC (normally closed) version, the venturi nozzle is activated.
- In the IMP variant, the venturi nozzle is actuated using the same principle as the NC variant.

In the ejector variant IMP, the ejector remains in "Suction" mode if the power supply fails during automatic mode. This prevents objects that have been picked up from falling off the suction cup in the event of a power supply failure. This also applies when the ejector was in the "Venturi nozzle inactive" state with the air-saving function activated. In this case, the ejector switches to "Venturi nozzle active," i.e., to continuous suction. When the power supply returns, the ejector remains in automatic mode with the air-saving function activated. If the ejector is in blow-off mode when the power supply fails, the blow-off is stopped and the ejector is set to "pneumatically OFF". This prevents unnecessary consumption of compressed air, thus saving energy and additional costs. When the power supply returns, the ejector remains in "pneumatically OFF" mode.

An integrated sensor records the vacuum generated by the venturi nozzle. The exact vacuum level is shown on the display and can be read from the IO-Link process data.

The diagram below shows the vacuum curve for when the air saving function is activated:

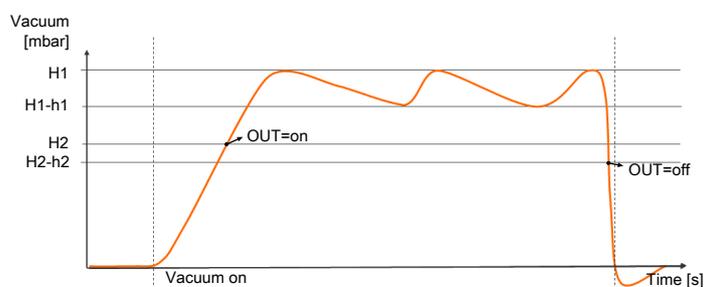

The ejector has an integrated air saving function and automatically regulates the vacuum in suction mode:

- The electronics switch the venturi nozzle off as soon as the set vacuum limit value (switching point H1) is reached.
- When objects with airtight surfaces are picked up, the integrated non-return valve prevents the vacuum from dropping.
- If the system vacuum drops below the limit value switching point H1-h1 due to leaks, the venturi nozzle is switched back on.
- Depending on the vacuum, the H2 process data bit is set once a workpiece is picked up safely. This enables the further handling process.

3.1.2 Depositing the Workpiece/Part (Blowing Off)

In blow-off mode, the vacuum circuit of the ejector is supplied with compressed air. This ensures that the vacuum drops quickly, allowing the workpiece to be deposited quickly.

During blow-off, [-FF] is shown on the display.

The ejector provides three blow-off modes for selection:

- Externally controlled blow-off
- Internally time-controlled blow-off
- Externally time-controlled blow-off

3.1.3 Product Highlights

The current vacuum level can be shown on a three-digit display. LEDs are used to indicate switching points H1 and H2 and the current process status ("Suction" or "Blow-off"). There are also four buttons for operation.

Monitoring the system pressure: The ejector with the built-in pressure sensor (-PC- variant) monitors the system pressure in addition to the system vacuum.

It has an IO-Link class B interface; this will be referred to as the "IO-Link" for the remainder of this document.

In IO-Link mode, the ejector has an energy and process control (EPC) for monitoring the vacuum circuit. All of the settings, parameters and measurement and analysis data are made available centrally via IO-Link.

Additionally, much of the information and the status reports for the ejector can be accessed using wireless communication with NFC (Near Field Communication).

3.2 Operating Modes

If the ejector is connected to the supply voltage, it is ready for operation. This is the normal operating mode, in which the ejector is operated by the system controller.

The ejector is parameterized via the available menus or via IO-Link.

The following operating modes are available during the setup process:

- Setting Mode
- Manual Mode

3.3 Ejector Designation

The breakdown of the item designation (e.g. SXMPi-25-NO-H-M12-5) is as follows:

| Property | Variants |
|-----------------------|--|
| Type of ejector | SXMPi (M = with power blow-off module) |
| Nozzle size | 2.0, 2.5 and 3.0 mm |
| Controller | Normally open (NO) Normally closed (NC) Bistable, switched with pulse, IMP |
| Pneumatic connection | Horizontal, H Quick change, Q |
| Additional function | Pressure control, PC |
| Electrical connection | 1xM12, 5-pin plug |


Pneumatic Connection via Quick Change (Q)

The Quick Change -Q- option can be ordered for all ejector variants. This version of the ejector comes with a special connection module for the pneumatic connections. The Quick Change system allows you to change ejectors quickly without removing the pneumatic connections.

Additional Pressure Control Function

The -PC- option can be ordered for all ejector types. In this version, an additional pressure sensor is integrated into the ejector. This senses the current pressure at the ejector.

3.4 Ejector Structure

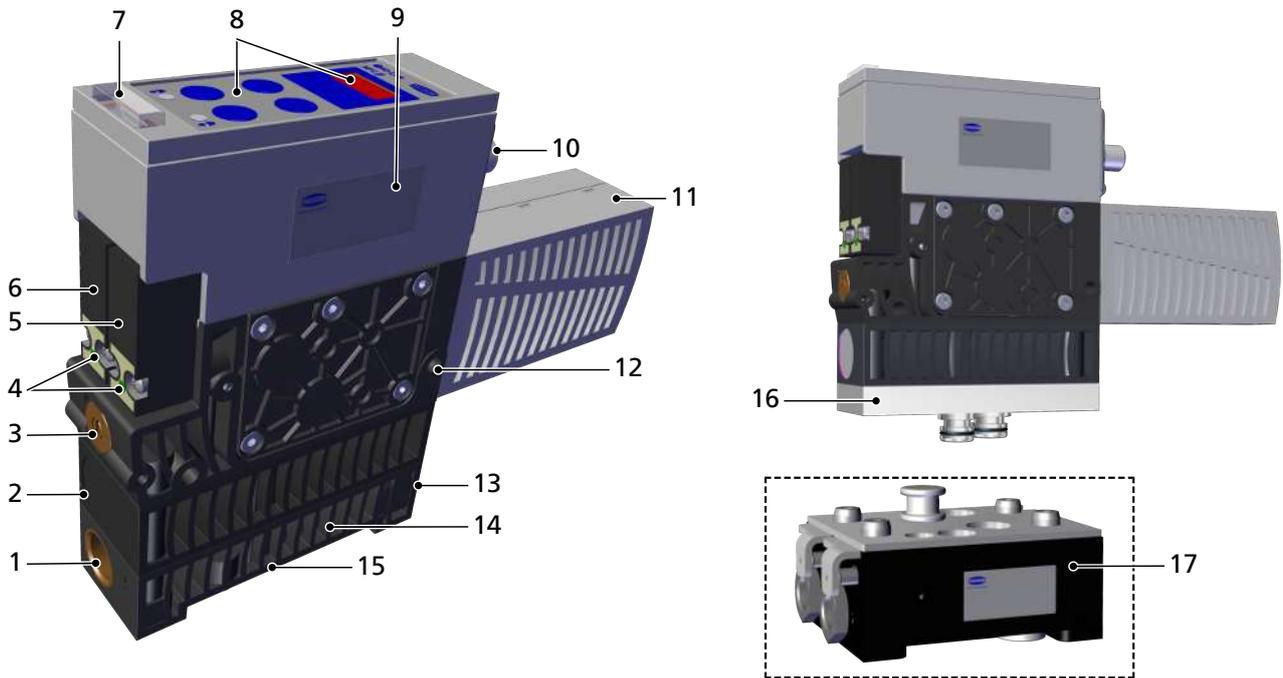


| | | | |
|----|--|----|---|
| 1 | G3/8" vacuum connection in H version (label: 2 [V]) | 2 | Power blow-off module |
| 3 | Valve screw for blow-off volume flow | 4 | Manual auxiliary actuation for pilot valves |
| 5 | "Suction" pilot valve – NO, NC or IMP (depending on version) (IMP variant without manual auxiliary actuation) | 6 | "Blow-off" pilot valve – NC |
| 7 | Condition monitoring | 8 | Operating and display elements |
| 9 | Type plate | 10 | M12-5 electrical connection |
| 11 | Silencer | 12 | Mounting holes (2x Ø 5.5 mm) |
| 13 | G3/8" compressed air connection in H version (label: 1 [P]) | 14 | Horizontal pneumatic connection (H) (1[P]= G3/8", 2[V]= G3/8") |
| 15 | 2x M5 mounting threads | 16 | Quick Change module (Q) |
| 17 | Accessories: Quick change double block++ + | | |

3.5 Controls and Displays in Detail

The ejector is fitted with the following elements to ensure simple operation:

- 4 keys on the foil keypad
- The three-digit display
- 4 light-emitting diodes (LEDs) as status indicators
- The condition monitoring system

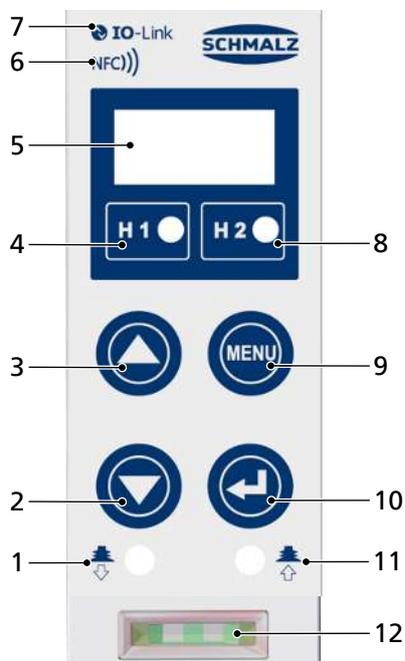

| | | | |
|----|--|----|--|
| 1 | LED for "Blow-off" process state | 2 | Down button |
| 3 | Up button | 4 | H1 limit value LED |
| 5 | Display | 6 | NFC symbol (product is equipped with an NFC interface) |
| 7 | IO-Link symbol (product is equipped with an IO-Link interface) | 8 | H2 limit value LED |
| 9 | Menu button | 10 | Enter button |
| 11 | LED for "Suction" process state | 12 | Condition monitoring system |

Definition of the LED Indicators

The "Suction" and "Blow-off" process states are each assigned an LED.

| Item | Meaning | Status | Description |
|----------|--------------|--|-------------------------|
| 1*) | Blow-off LED |  OFF | Ejector not blowing off |
| | |  Lit up | Ejector blowing off |
| 11*) | Suction LED |  OFF | No suction from ejector |
| | |  Lit up | Suction from ejector |
| 1 and 11 | Manual Mode | Manual control of the suction and blow-off ejector functions (both the suction and blow-off LEDs flash). (> See ch. Manual Mode, Page 29) | |

*) The suction and blow-off LEDs are activated only when there is actuator supply voltage.

The LEDs for the H1 and H2 limit values indicate the current level of the system vacuum relative to the configured limit values. Their display behavior is independent of the switching functions or assignment of the output bit; it is also independent of whether the condition monitoring function is active.

The table below explains the meaning of the LEDs.

| Limit value LEDs | Ejector status |
|---|--|
|  | Rising vacuum: Vacuum < H2 |
| | Falling vacuum: Vacuum < (H2-h2) |
|  | Rising vacuum: Vacuum > H2 and < H1 |
| | Falling vacuum: Vacuum > (H2-h2) and < (H1-h1) |
|  | Rising vacuum: Vacuum > H1 |
| | Falling vacuum: Vacuum > (H1-h1) |

Condition monitoring system

In parallel with the IO-Link, the overall status of the ejector system is displayed as a traffic light by the condition monitoring system [12]. The results of the condition monitoring are used to determine the status. This basic display provides immediate information about the status of the ejector.

The table below explains the meaning of the condition monitoring display.

| Condition monitoring system [12] | | Meaning |
|---|-------------------------|---|
|  | Display lights up green | The ejector is working perfectly with optimum operating parameters. |
|  | Display flashing green | The ejector is working, but there are warnings. |
|  | Display flashing red | The ejector is working, but maintenance is required. |
|  | Display lights up red | Error – Safe operation of the ejector within the operating limits is not guaranteed (error code is available in the error parameter). |

4 Technical Data

4.1 Display Parameters

| Parameter | Value | Unit | Note |
|-------------------------------------|-------|-------|---|
| Display | 3 | Digit | Red 7-segment LED display |
| Resolution | ±1 | mbar | -- |
| Accuracy | ±3 | % FS | T _{amb} = 25°C, based on FS final value (full-scale) |
| Display refresh rate | 5 | 1/s | Only affects the 7-segment display |
| Idle time before the menu is exited | 1 | min | The display mode is accessed automatically when no settings are made in a menu. |

4.2 General Parameters

| Parameter | Symbol | Limit value | | | Unit | Note |
|------------------------------------|--|-------------|------|------|--------|------------------------|
| | | min. | typ. | max. | | |
| Working temperature | T _{amb} | 0 | --- | 50 | C | --- |
| Storage temperature | T _{Sto} | -10 | --- | 60 | C | --- |
| Humidity | H _{rel} | 10 | --- | 90 | % r.h. | Free from condensation |
| Degree of protection | --- | --- | --- | IP65 | --- | --- |
| Operating pressure (flow pressure) | P | 4 | 5 | 7 | bar | --- |
| Operating medium | Air or neutral gas, 5 µm filtered, with or without oil, class 7-4-4 compressed air quality in acc. with ISO 8573-1 | | | | | |

4.3 Electrical Parameters

| | | |
|--|--|--------|
| Power supply for sensor | 24 V -20 to +10% VDC (PELV ¹⁾) | |
| Power supply for actuator | 24 V -20 to +10% VDC (PELV ¹⁾) | |
| Sensor power consumption ²⁾ (at 24 V) | | 60 mA |
| Actuator power consumption ²⁾ (at 24 V) | SX(M)Pi – xx – NO/IMP | 130 mA |
| | SX(M)Pi – xx – NC – xx | 70 mA |
| Polarity reversal protection | Yes, all M12 connector connections | |
| NFC | NFC Forum Tag type 4 | |
| IO-Link | IO-Link 1.1 Baud rate COM2 (38.4 Kbits/s) | |

¹⁾ The supply voltages must correspond to the regulations in accordance with EN60204 (protected extra-low voltage).

²⁾ Typical power consumption

4.4 Mechanical Data

4.4.1 Performance Data

| Type | SXMPi20 | SXMPi25 | SXMPi30 |
|---|---------|---------|---------|
| Nozzle size [mm] | 2.0 | 2.5 | 3.0 |
| Max. vacuum ¹ [%] | 85 | | |
| Suction rate ¹ [l/min] | 135 | 185 | 220 |
| Max. blow off capacity ¹ [l/min] | 320 | | |
| Air consumption ¹ [l/min] | 180 | 290 | 380 |
| Sound level ¹ , unobstructed suction [dBA] | 65 | 67 | 72 |
| Sound level ¹ , suction [dBA] | 62 | 64 | 69 |
| Weight [kg] | 0.91 | | |

¹⁾ at 4.5 bar


4.4.2 Factory Settings

| Code | Parameter | Value of the factory setting |
|------|----------------------|--------------------------------------|
| H-1 | Limit value H1 | 750 mbar |
| h-1 | Hysteresis value h1 | 150 mbar |
| H-2 | Limit value H2 | 550 mbar |
| h-2 | Hysteresis value h2 | 10 mbar |
| HP-1 | Limit value H1 | 4.0 bar |
| hp-1 | Hysteresis value hp1 | 0.2 bar |
| tBL | Blow-off time | 0.2 s |
| cEr | Control | Activated = ON |
| dcS | Sustained suction | Deactivated = OFF |
| t-1 | Evacuation time | 2 s |
| -L- | Leakage value | 250 mbar/s |
| bLo | Blow-off function | Externally controlled blow-off = -E- |
| uN1 | Vacuum unit | Vacuum unit in mbar = -bA |
| dLY | Switch-off delay | 10 ms |
| dPY | Display rotation | Standard = Std |
| ECO | ECO mode | Deactivated = OFF |
| P in | PIN code | User-defined 000 |

The production setup profiles P-1 to P-3 are factory-set to have the exact same data set as the default data set P-0.

4.4.3 Dimensions


Variant SXMPi ...H...

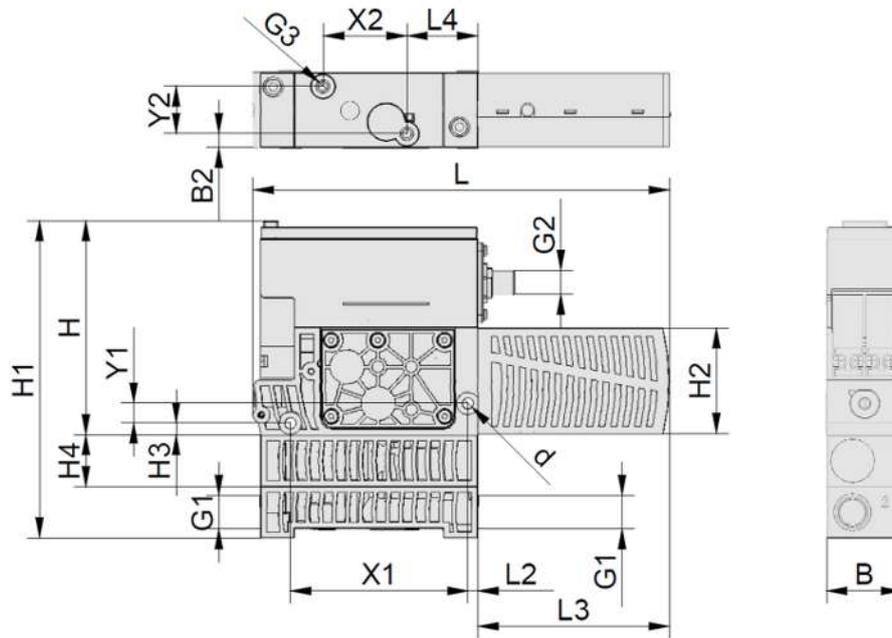

| B | B2 | d | G1 | G2 | G3 | H | H1 | H2 | H3 | H4 |
|-----|-----|-----|----------|--------|-------|-----|-----|-----|----|----|
| 39 | 6.8 | 5.5 | G3/8"-IG | M12-AG | M5-IG | 108 | 160 | 54 | 6 | 26 |
| L | L2 | L3 | L4 | X1 | X2 | Y1 | Y2 | H5 | | |
| 210 | 5 | 97 | 35.5 | 89 | 42 | 10 | 24 | 5.5 | | |

All specifications are in mm


Variant SXMPi ...Q...

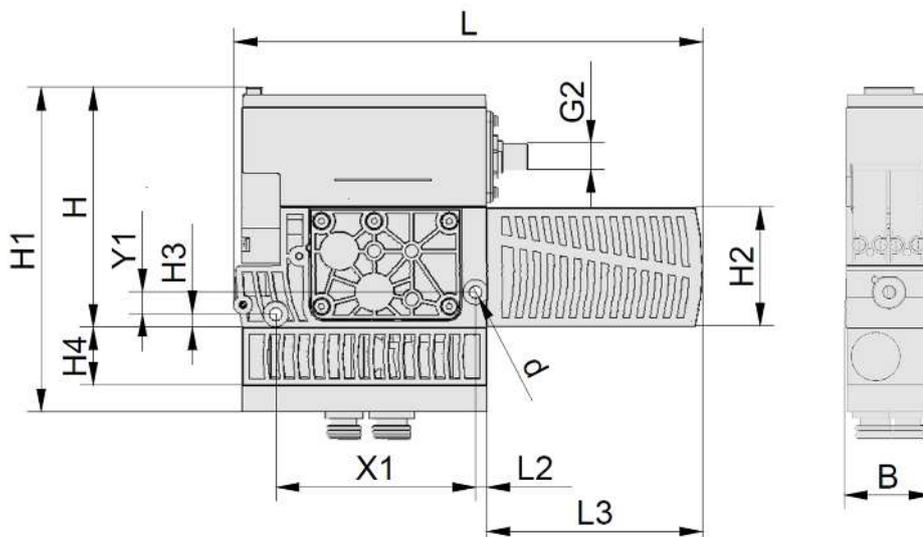

| | | | | | | | |
|----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| B | d | G2 | H | H1 | H2 | H3 | H4 |
| 39 | 5.5 | M12-AG | 108 | 146 | 54 | 6 | 26 |
| L | L2 | L3 | X1 | Y1 | H5 | | |
| 210 | 5 | 97 | 89 | 10 | 5.5 | | |

All specifications are in mm

GP2 base plate, "Quick Change Adapter"

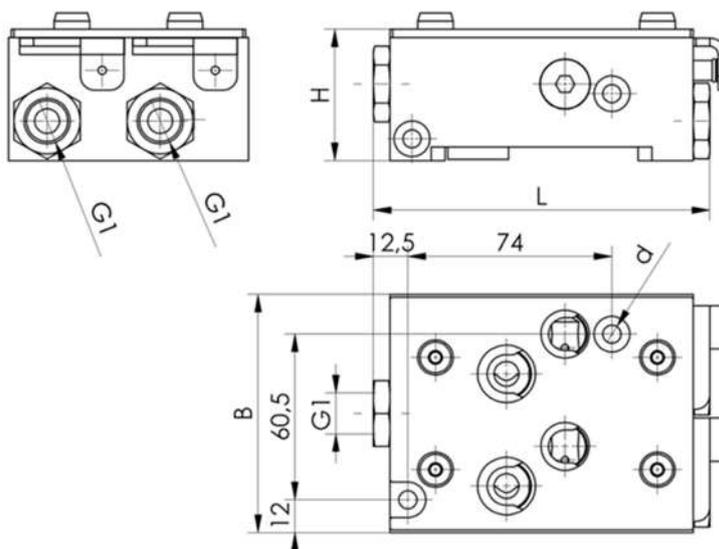

| | | | | |
|----------|----------|-----------|----------|----------|
| B | d | G1 | H | L |
| 87 | 6.6 | G3/8"-IG | 48 | 122 |


All specifications are in mm

4.4.4 Maximum Torque


| Connection | Max. torque |
|----------------------|-------------|
| On ejector | |
| Thread G1 | 6 Nm |
| Mounting G3 (2xM5) | 2 Nm |
| Mounting hole d | 4 Nm |
| Pilot valves | 0.7 Nm |
| Thread G2 | Hand-tight |
| Controller | 0.5 Nm |
| On base plate | |
| G1 | 6 Nm |

4.4.5 Pneumatic circuit plans


SXMPi ...NO...

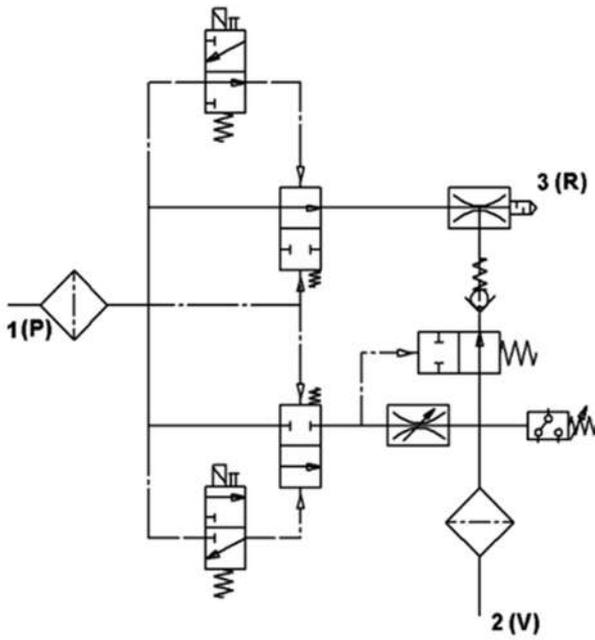


SXMPi ...NC...

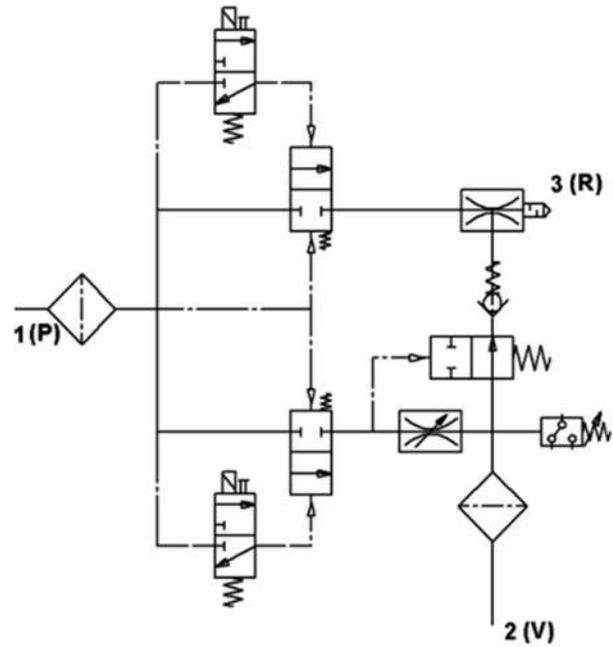

SXMPi ...IMP...

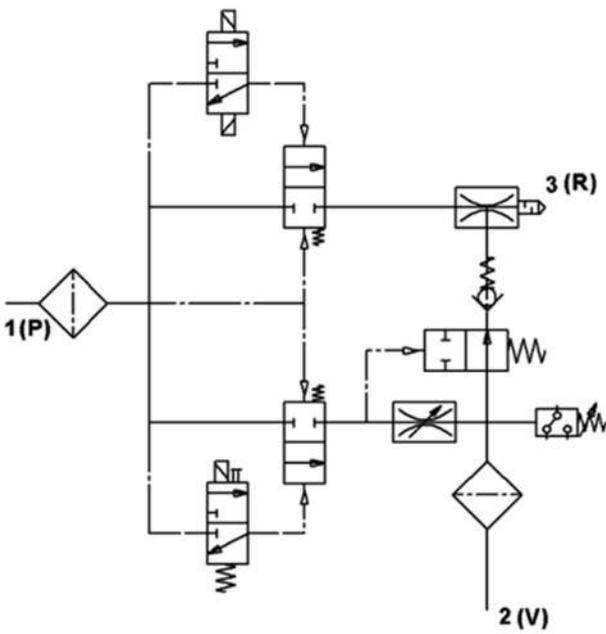

SXMPi ...IMP...PC

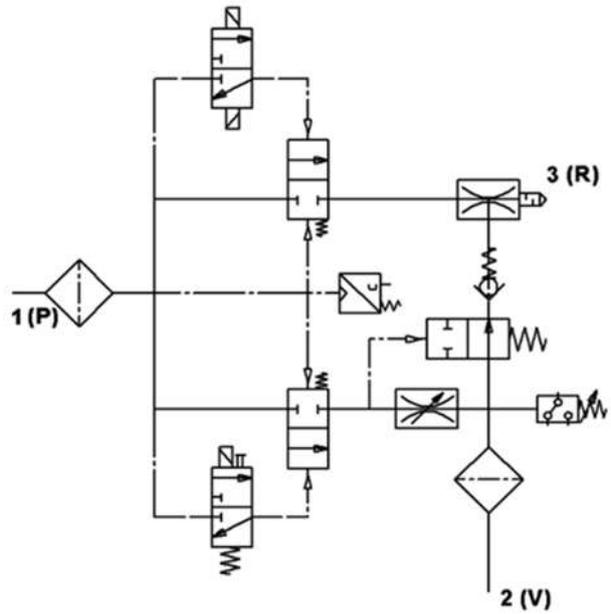

5 Operating and Menu Concepts

The ejector operated using four buttons on the foil keypad.



Settings are configured in software menus. The following menus are available:

- Main menu: for standard applications
- Configuration menu: for applications with special requirements
- System menu: for reading out system data such as counters, the software version, etc.

If settings are changed, undefined states of the system may occur for a short time (for approx. 50 ms).

The following information can be shown on the display:

- The current vacuum measurement value
- The selected menu item
- The settings
- Error messages in the form of error codes

In the basic operating menu state, the actual measurement value of the vacuum is displayed on the basis of the chosen display unit. All units are available in millibar, kilo pascal, inch-hg and PSI. The measured value is displayed as a positive compared to the ambient air pressure.



After a parameter is set in the operating menu, the power supply of the switch must remain stable for at least 3 seconds. Otherwise, there may be a loss of data and the resulting error E0 I.

The menus will automatically close if no buttons are pressed for 1 minute.

The display also returns to the basic status when an error status occurs so that the error code can be displayed. A menu can be called up and used again afterward.

5.1 Button Assignments in Display Mode

In display mode, a specific function is assigned to each key.

5.1.1 Opening the Menu

Press the **MENU BUTTON** to open the menus as follows:

- ▶ Press the  button briefly.
 - ⇒ The current production setup profile is briefly displayed, and the main menu opens with the first parameter [H- I].
- ▶ Press the  for about three seconds.
 - ⇒ The display flashes [-C-]
 - ⇒ The configuration menu opens with the first parameter [C-E-r].

Starting the system menu:

- ▶ Press  and  simultaneously for about three seconds.
 - ⇒ The display flashes [-5-]
 - ⇒ The system menu opens with the first parameter [c c i].

5.1.2 Displaying the Operating Mode and Supply Voltages (Slide Show)

When you press the  button in the basic operating state, the following parameters are automatically displayed one after the other on the display (slide show):

- The current operating mode (S IQ or IQL)
- The supply voltages U_S and U_A

The display cycle returns to the vacuum display after a complete cycle or can be canceled at any time by pressing any button.

5.1.3 Displaying the System Pressure

- ▶ Press the  button to show the current system pressure.
 - ⇒ The system pressure is displayed.
- ▶ Press the  button to exit the system pressure display.

On the variant without a built-in pressure sensor, the values are specified via the IO-Link.

5.1.4 Displaying the vacuum/pressure unit

- ▶ Press the  button to display the set vacuum/pressure unit.

After about two seconds, the screen returns to the vacuum display.

5.2 Main Menu

All settings for standard applications can be accessed and configured using the main menu.

5.2.1 Functions in the Main Menu

The following table shows an overview of the display codes and parameters in the main menu:

| Display code | Parameter | Explanation |
|--------------|-------------------------------------|---|
| H-1 | Limit value H1 | Deactivation value of control function (only if [c t r] = [o r] is active) |
| h-1 | Hysteresis value h-1 | Hysteresis value for the control function |
| H-2 | Limit value H2 | Switching value for the "Parts control" signal |
| h-2 | Hysteresis value h-2 | Hysteresis value for the "Parts control" signal |
| HP 1 | Limit value H1 | Switching value for the "Pressure control" signal |
| hP 1 | Hysteresis hP1 | Hysteresis value for the "Pressure control" signal |
| t b L | Ventilation time | Blow-off time setting for time-controlled blow-off (only if [b L o] = [l - t] or [E - t] is active) |
| c AL | Zero-point adjustment (calibration) | Calibrate vacuum sensor, zero point = ambient pressure |

5.2.2 Changing the Parameters of the Main menu

1. Press the  button briefly.
 2. Use the  or  button to select the desired parameter.
 3. Confirm using the  button.
 4. Use the  or  button to change the value.
 5. If the menu is locked: Enter a valid PIN code.
 6. Press the  button to save the modified value.
- ⇒ The displayed value flashes to confirm.
- ⇒ The display automatically jumps to the next setting value.



Tips and Tricks for Parameter Setting

- By pressing the  or  button for approx. 3 seconds, the value to be changed is scrolled through quickly
- If you exit the modified value by briefly pressing , the value will remain unchanged.

5.3 Configuration Menu

The configuration menu is available for applications with special requirements.

5.3.1 Functions in the Configuration Menu

The following table shows an overview of the display codes and parameters in the configuration menu:

| Display code | Parameter | Possible settings | Explanation |
|--------------|----------------------------------|--|---|
| cEr | Energy-saving function | oFF oN oNS | Control function off Control active Control with leak monitoring active |
| dCS | Deactivate auto. control shutoff | nO yES | Suppresses the automatic valve protection function when set to yES. Cannot be activated when cEr = oFF. |
| t - t | Max. permissible evacuation time | configurable between 0.01 and 9.99 seconds in steps of 0.01 oFF | Permissible evacuation time; evaluation in IO-Link only No monitoring |
| -L- | Max. permissible leakage | Values configurable between 0 and 999 | Menu item only displayed when cEr = oNS Unit: Millibar per second This value is used for oNS and CM warnings. The adjustable leakage value can be used to judge the quality of the suction process. Evaluation in IO-Link only. |
| bLo | Blow-off function | -E- I-E E-E | Externally controlled Internally controlled (triggered internally, time can be set) Externally controlled (triggered externally, time can be set) |
| dLY | Switching signal delay | Values: 10, 50, 200 and oFF | Delays switching signals H 1, HP 1 and H2 Unit: milliseconds |

| Display code | Parameter | Possible settings | Explanation |
|--------------|---------------------|----------------------------|---|
| u n i | Vacuum unit | mBar PSI inHg kPa | Define the displayed vacuum unit Vacuum in mbar Vacuum in psi Vacuum in inHg Vacuum in kPa |
| dPY | Display rotation | Std rEd | Display configuration Standard rotated 180° |
| Eco | Display in ECO mode | off Lo on | Configure the display ECO mode is deactivated – the display remains on The brightness is reduced by 50 percent. Eco mode activated – if no buttons are pressed, the display turns off after one minute |
| PIn | PIN code | Value from 001 to 999 | Specify the PIN code, lock the menus If the PIN code is 000, then the device is not locked. |
| nFc | NFC lock | on dis Loc | NFC lock: NFC active Completely switched off Write-protected |
| rES | Reset | YES | All parameter values are reset to factory settings. |

The factory settings for the parameters are listed under (> See *ch. Factory Settings, Page 17*) in the Technical Data section.

5.3.2 Changing the Parameters of the Configuration Menu

1. Press the  button for at least three seconds.
⇒ The display will flash [-C-] during this process.
2. Use the  or  button to select the desired parameter.
3. Confirm using the  button.
4. Use the  or  button to change the value.
5. If the menu is locked: Enter a valid PIN code.
6. Press the  button to save the modified value.
7. To exit the configuration menu, press the  button.



Tips and Tricks for Parameter Setting

- By pressing the  or  button for approx. 3 seconds, the value to be changed is scrolled through quickly
- If you exit the modified value by briefly pressing , the value will remain unchanged.

5.4 System Menu

The system menu can be used to read out system data, such as counters, the software version, the part and serial numbers, etc.

5.4.1 Functions in the System Menu

The following table shows an overview of the display codes and parameters in the system menu:

| Display code | Parameter | Explanation |
|--------------|-------------------------|---|
| cc1 | Counter 1 | Counter for suction cycles (suction signal input) |
| cc2 | Counter 2 | Valve switching cycles |
| cc3 | Counter 3 | CM counter |
| ct1 | Erasable counter 1 | Counter for suction cycles (suction signal input) |
| ct2 | Erasable counter 2 | Valve switching cycles |
| ct3 | Erasable counter 3 | CM counter |
| rcct | Reset erasable counters | All erasable counters reset to zero |
| Soc | Software | Displays the current software version |
| Art | Part number | The part number is displayed |
| Snr | Serial number | The serial number is displayed |

5.4.2 Viewing Data in the System Menu

- ▶ Press and hold the  and  buttons simultaneously for at least three seconds.
 - ⇒ Meanwhile the display flashes [-5-].
- 1. Use the  or  button to select the parameter to be shown.
- 2. If the menu is locked: Enter a valid PIN code.
- 3. Confirm using the  button.
 - ⇒ The value is displayed.
- 4. To exit the system menu, press the  button.

6 Interfaces

6.1 Basic Principles of IO-Link Communication

The ejector is operated in IO-Link mode to enable intelligent communication with a controller.

The IO-Link communication takes place using cyclical process data and acyclical ISDU parameters.

The ejector's parameters can be set remotely using IO-Link mode. In addition, the energy and process control (EPC) feature is available. The EPC is divided into 3 modules:

- Condition monitoring (CM): Condition monitoring to increase system availability
- Energy monitoring (EM): Energy monitoring to optimize the vacuum system's energy consumption
- Predictive maintenance (PM): Predictive maintenance to increase the performance and quality of the gripping systems

6.2 Process Data

The cyclical process data is used to control the ejectors and receive current information reported from the ejector. There is a difference between the input data (Process Data In) and the controlling output data (Process Data Out).

The input data Process Data In is used to report the following information cyclically:

- The ejector device status in the form of a status traffic light
- EPC data
- Ejector errors and warnings
- Sensor and actuator supply voltage
- Air consumption
- Parameter data, e.g. vacuum data, pressure value (PC variant only), counters, evacuation time, dynamic pressure and air consumption.
- Limit values H1 and H2

The output data Process Data Out is used to control the ejector cyclically:

- EPC Select is used to define which data is sent.
- To determine the air consumption, the system pressure can be preset.
- The ejector is controlled using the suction and blow-off commands.

The exact meaning of the data and functions is described in more detail in the (> See *ch. Description of Functions, Page 28*) chapter. A detailed description of the process data can be found in the data dictionary.

The corresponding device description file (IODD) is available for integration into a higher-level controller.

6.3 ISDU Parameter Data

The acyclical communication channel can be used to retrieve what are known as ISDU (Index Service Data Unit) parameters, which contain further information on the system status.

The ISDU channel can also be used to read or overwrite all the settings, e.g. the limit values, additional leakage, etc. Further information on the identity of the ejector, such as the part number and serial number, can be retrieved using the IO-Link. The ejector also provides space for saving user-specific information here, such as the installation and storage location.

The exact meaning of the data and functions is described in more detail in the "Description of Functions" chapter.

You can find a detailed diagram of the process data in the data dictionary and IODD.

In order for a control system to access the ISDU parameters, the necessary system functions must be purchased from the manufacturer of the control system and used.

See also

📄 Description of Functions [▶ 28]

6.4 Near Field Communication (NFC)


NFC (Near Field Communication) refers to a standard for wireless data transfer between different devices over short distances.

The ejector functions as a passive NFC tag that can be read or written by a read or write device which has NFC activated, such as a smartphone or tablet. Access to the ejector parameters via NFC also works when the supply voltage is not connected.

There are two options for communicating via NFC:

- Read access only can be obtained via a website viewed in a browser. For this, no additional app is needed. It requires only that NFC and the Internet connection are enabled.
- Another option for communication is the "Schmalz ControlRoom" control and service app. This permits not only read access, but also active reconfiguration of the parameters via NFC. The Schmalz ControlRoom app is available at the Google Play Store.

For the best data connection, set the reading device on the middle of the ejector keyboard.

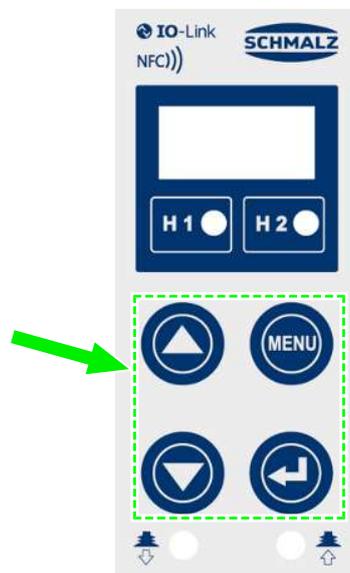

The reading distance is very short for NFC applications. Determine the position of the NFC antenna in the reading device used. If parameters of the device are modified via IO-Link or NFC, then the power supply must subsequently remain stable for at least three seconds to prevent data loss (error E01).

7 Description of Functions

7.1 Overview of Functions

| Description | See section |
|---|---|
| Operating modes | (> See <i>ch. Operating Modes</i> , Page 29) Automatic mode, manual mode, setting mode and restricted mode |
| Switching point setting | (> See <i>ch. Monitoring the System Vacuum and Pressure and Defining Limit Values</i> , Page 31) |
| Zero point calibration | (> See <i>ch. Calibrating the Sensors [0x0002]</i> , Page 32) |
| Energy-saving function, control function | (> See <i>ch. Control Functions [P-0: 0x0044]</i> , Page 32) |
| Blow-off function | (> See <i>ch. Blow-Off modes [0x0045]</i> , Page 33) |
| Defining blow-off time | (> See <i>ch. Setting the Blow-Off time [P-0: 0x006A]</i> , Page 34) |
| Display unit | (> See <i>ch. Selecting a Display Unit [0x004A]</i> , Page 34) |
| Switch-off delay | (> See <i>ch. Switch-Off Delay [0x004B]</i> , Page 34) |
| Display alignment | (> See <i>ch. Rotating the Display [0x004F]</i> , Page 35) |
| Eco mode | (> See <i>ch. ECO Mode [0x004C]</i> , Page 35) |
| PIN code, access authorizations | (> See <i>ch. Locking and Unlocking the Menus</i> , Page 35) |
| IO-Link device access locks | (> See <i>ch. Restricting Access Using Device Access Locks [0x000C]</i> , Page 36) |
| IO-Link extended device access locks | (> See <i>ch. Restricting Access with Extended Device Access Locks [0x005A]</i> , Page 37) |
| Reset to factory settings | (> See <i>ch. Resetting to Factory Settings (Clear All) [0x0002]</i> , Page 37) |
| Counter | (> See <i>ch. Counters</i> , Page 38) |
| Software version | (> See <i>ch. Displaying the Software Version [0x0017]</i> , Page 39) |
| Article number | (> See <i>ch. Displaying the Serial Number [0x0015]</i> , Page 39) |
| Serial number | (> See <i>ch. Displaying the Part Number [0x00FA]</i> , Page 39) |
| Production setup profiles | (> See <i>ch. Production setup profiles</i> , Page 39) |
| Energy and Process Control (EPC): Condition monitoring (CM) Energy monitoring (EM) Predictive maintenance (PM) | (> See <i>ch. Energy and Process Control (EPC)</i> , Page 40) |
| Voltage measurement | (> See <i>ch. Displaying the Operating Mode and Supply Voltages (Slide Show)</i> , Page 22) |
| Warnings and errors | (> See <i>ch. Troubleshooting</i> , Page 55) |

7.2 Operating Modes

7.2.1 Automatic Operation

Once the ejector is connected to the power supply, it is ready for operation and enters automatic operation mode. This is the normal operating mode, in which the ejector is operated by the system controller.

The operating mode may be changed from automatic to manual mode using the buttons.

Parameterization of the ejector is always performed in automatic operation mode.

7.2.2 Manual Mode



NOTE

Change the output signals in manual mode

Personal injury or damage to property

- ▶ Electrical connection may be performed only by specialists who can evaluate the effects of signal changes on the overall system.

In manual mode, the "Suction" and "Blow-off" ejector functions can be controlled independently of the higher-level controller using the buttons on the foil keypad of the operating element. Because the valve protection function is deactivated in this mode, this function is used to locate and rectify leakages in the vacuum circuit.

In this operating mode, the "H1" and "H2" LEDs both flash.

Activating Manual Mode



NOTE

Manual mode modified by external signals

Personal injury or damage to property due to unpredictable work steps

- ▶ Ensure that the danger zone of the system is clear of people during operation.



NOTE

It is not possible to activate manual mode.

Access to manual mode is locked by the controller. This status is indicated by the code E90 on the display.

- ▶ Unlock manual mode using the controller.

- ▶ Press and hold the  and  buttons simultaneously for at least three seconds.

⇒ Meanwhile, the display shows [-□-].

⇒ The "H1" and "H2" LEDs flash.

Deactivating Manual Mode

✓ The ejector is in "manual mode".

- ▶ Press the  button.

⇒ The H1 and H2 LEDs cease to flash.

The device also exits manual mode when the status of the external signals changes.

When the ejector receives an external signal, it switches to automatic mode.

Activating and Deactivating Manual Suction

Activating Manual Suction

- ✓ The ejector is in "manual mode". The "H1" and "H2" LEDs flash.
- ▶ Press the  button to activate "Suction" mode.
- ⇒ The suction LED lights up.
- ⇒ The ejector begins to suck.

Deactivating Manual Suction

- ✓ The ejector is in "Suction" mode.
- ▶ Press the  button again or press the  button to deactivate "Suction" mode once more.
- ⇒ The suction process is deactivated.

When the controller is on [C E F] = [D H] it uses the configured limit values in "Manual" mode as well. The valve protection function is not active in manual mode.

Activating and Deactivating Manual Blow-off

- ✓ The ejector is in "manual mode".
- ▶ Press and hold the  button.
- ⇒ The blow-off LED lights up.
- ⇒ The ejector blows off as long as the button is held.
- ▶ Release the button on the ejector to end the blow-off.
- ⇒ The blow-off process is deactivated.

7.2.3 Setting Mode

Setting mode is used for locating and eliminating leakages in the vacuum circuit. Since the valve protection function is deactivated and the control is not deactivated, even at increased control frequencies.

In this operating mode, the "H1" and "H2" LEDs both flash.

Setting Mode Activated and Deactivated

- ▶ Set the corresponding value using bit 2 in the output process data byte (PDO).

A change to bit 0 or bit 1 (suction or blow-off) in the PDO also causes the ejector to exit setting mode.

This function is only available in IO-Link mode.

7.2.4 Restricted Mode

The supply voltage is monitored by the electronics system. If the supply voltage falls below approx. 19.2 V, this is indicated by an error message. It cannot be guaranteed that the ejector will operate as intended below this voltage threshold.


However, operation in "restricted mode" is still possible.

On ejector variants NO and NC, the "blow-off" and "suction" pilot valves are equipped with manual auxiliary actuation; on eject variant IMP, only the "blow-off" pilot valve is equipped with manual auxiliary actuation.

This can be used to actuate the valve manually without a power supply.

- ✓ The compressed air supply is connected.

- ▶ To activate the valve in question, trigger the manual auxiliary actuation using an implement such as a ballpoint pen.

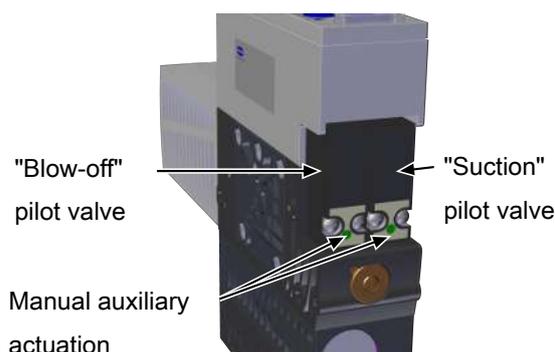

The valves can be operated manually in "restricted mode" using the manual auxiliary actuation without a power supply.

7.3 Monitoring the System Vacuum and Pressure and Defining Limit Values

The ejector has built-in sensors for vacuum measurement and compressed air measurement (-PC- variant only).

The current vacuum and pressure levels are shown on the display and can be read out via IO-Link.

The limit values and hysteresis can be adjusted in the menu items [H- 1], [h- 1], [H- 2], [h- 2], [HP 1] and [hP 1], or via IO-Link.

Limit values H-1 and h-1 are used for control purposes in the control function.

There is also a "part deposited" limit value, H3 [PDIN0], which cannot be adjusted in the main menu. This value is fixed at 20 mbar. If the system reaches a vacuum of < 20 mbar (once H2 has been reached), the ejector issues signal H3. This tells the controller that the part has been deposited successfully. The signal is reset by issuing a new Suction ON command.

Overview of vacuum and pressure limit values:

| ISDU [Hex] | Limit value parameter | Description |
|-------------|-----------------------|---|
| P-0: 0x0064 | H1 | Vacuum control value |
| P-0: 0x0065 | h1 | Vacuum hysteresis |
| P-0: 0x0066 | H2 | Activation value of "Parts control" signal output |
| P-0: 0x0067 | h2 | Hysteresis of "Parts control" signal output |
| — | H3 | Part deposited; 20 mbar |
| P-0: 0x0068 | HP1 | Pressure activation value |
| P-0: 0x0069 | hP1 | Hysteresis pressure |

7.4 Calibrating the Sensors [0x0002]

Since the sensors installed in the ejector are subject to variants based on the manufacturing process, we recommend calibrating the sensors after installation. In order to calibrate the ejector, the system's pneumatic circuits must be open to the atmosphere.

A zero offset is only possible in the range of ± 3 percent of the end value of the measuring range.

When the permissible limit is exceeded by ± 3 percent, error codes [E03] and [E04] will appear on the display and the IO-Link.

The function for zero-point adjustment of the sensors is executed in the main menu using the parameter $\square RL$ or the IO-Link.

Calibrating from the Main Menu:

1. To set the zero point of the integrated sensors, press the  button.
 2. Press the  or  button until $\square RL$ appears in the display
 3. Confirm using the  button.
 4. Press  or  to choose between [r0], [LRC] (vacuum sensor calibration) and [PR5] (pressure sensor calibration; -PC- variant only).
 5. If the menu is locked: Enter a valid PIN code.
 6. Confirm using the  button.
- ⇒ The selected sensor is calibrated.

7.5 Control Functions [P-0: 0x0044]

The ejector allows you to save compressed air or prevent a too powerful vacuum from being generated. Vacuum generation is interrupted once the configured switching point H1 is reached. If leakage causes the vacuum to fall below the hysteresis switching point (H1-h1), vacuum generation resumes.

The **permissible leakage** [P-0: 0x006C] is set in the Configuration menu using the [$\square L$] parameter, and mbar as the unit of measurement. The leakage is measured after the control function has interrupted suction once switching point H1 is reached.

The following operating modes can be set for the controller function in the Configuration menu using the [$\square LR$] parameter or via IO-Link.

7.5.1 No Control (Continuous Suction)

The ejector produces continuous suction with maximum power. This setting is recommended for very porous workpieces, which would otherwise cause the vacuum generator to switch on and off continuously due to the high rate of leakage.

In this mode, the control function is set to $\square FF$.

This setting can only be adjusted when the control shutoff is deactivated [$\square CS$] = [r0].

7.5.2 Control

The ejector switches off vacuum generation when the switching point H1 is reached and switches it back on when the vacuum falls below the hysteresis point (H1-h1). The switch point evaluation for H1 follows the control function. This setting is particularly recommended for airtight workpieces.

In this mode, the control function is set to [□□].

To protect the ejector, valve switching frequency monitoring is activated in this operating mode.

If the readjustment is too fast, the control function is deactivated and the device switches to continuous suction.

7.5.3 Control with Leak Monitoring

This operating mode is the same as the previous mode, with the addition that the leakage rate within the system is measured and compared to the configurable limit value for permissible leakage $-L-$.

If the actual leakage rate exceeds the limit value more than twice in succession, the control function is then deactivated and the ejector switches to continuous suction.

In this mode, the control function is set to [□□5].

7.5.4 Control Shutoff [P-0: 0x004E]

This function deactivates the automatic control shutoff.

The function can be set using the parameter [d c 5] in the configuration menu or via IO-Link.

If the [□□] setting is selected using the [d c 5] parameter, the ejector will switch to "continuous suction" mode in case of excessive leakage and a valve switching frequency >6/3 seconds.

If the [4 E 5] setting is selected using the [d c 5] parameter, continuous suction will be deactivated and the ejector will continue control, even in case of excessive leakage or if the valve switching frequency reaches >6/3 seconds. Continuous suction will not be activated if the valve frequency is exceeded.



When the control shutoff is deactivated, the suction valve makes frequent adjustments. This can destroy the ejector.

Depending on the ejector variant in question (NO/NC/IMP), the ejector will respond to undervoltage and power failures by switching to "Continuous suction", even when continuous suction has been deactivated by the [d c 5] = [4 E 5] setting.

7.6 Blow-Off modes [0x0045]

The following three blow-off modes are available. The function can be set with the parameter [b L □] in the configuration menu or via IO-Link.

7.6.1 Externally controlled blow-off

The "blow-off" valve is controlled directly by the "blow off" command. The ejector switches to blow-off mode for as long as the "Blow-off" signal is present. The "Blow-off" signal is given priority over the "Suction" signal.

In this mode, the blow-off function is set to [- E -].

7.6.2 Internally Time-Controlled Blow-Off

In this mode, the blow-off function is set to [l - E].

The "Blow-off" valve is automatically activated for the time period set as soon as the ejector leaves the "Suction" mode. The blow-off time can be set with the parameter [E b L] in the main menu. The parameter [E b L] is suppressed in the main menu if the operating mode [- E -] is active.

The "Blow-off" signal overrides the "Suction" signal, even if the specified blow-off time is very long.

7.6.3 Externally Time-Controlled Blow-Off

In this mode, the blow-off function is set to [E-].

The blow-off pulse is triggered externally by the "Blow-off" signal/command. The "Blow-off" valve is activated for the specified time [tBL]. A longer input signal does not increase the blow-off duration.

The "Blow-off" signal overrides the "Suction" signal, even if the specified blow-off time is very long.

The blow-off time can be set with the parameter [tBL] in the main menu. The parameter [tBL] is suppressed in the main menu if the operating mode [-E-] is active.

7.6.4 Setting the Blow-Off time [P-0: 0x006A]

If the blow-off function of the ejector is set to internally time-controlled [bL] = [I-] or externally time-controlled [bL] = [E-] "Blow-off", then the blow-off time [tBL] may be specified.

The displayed value indicates the blow-off time in seconds. The time can range from 0.10 to 9.99 seconds.

The parameter [tBL] is suppressed in the main menu if the operating mode [-E-] is active.

7.7 Selecting a Display Unit [0x004A]

The unit of the displayed vacuum or pressure level can be set using this function.

The function can be configured with the parameter [u] in the configuration menu or via IO-Link.

The following units are available:

| Unit | Explanation |
|------------|--|
| bar | The vacuum level is displayed in mbar. The pressure level is displayed in bar. The setting for this unit is [bAr]. |
| Pascal | The vacuum/pressure values are displayed in kPa. The setting for this unit is [kPa]. |
| Inch of Hg | The vacuum/pressure values are displayed in inHg. The setting for this unit is [iHg]. |
| psi | The vacuum/pressure values are displayed in psi. The setting for this unit is [PSi]. |



Selection of the unit only affects the display. The units of the parameters that can be accessed via IO-Link are not affected by this setting.

7.8 Switch-Off Delay [0x004B]

You can use this function to set a switch-off delay for the H1, H2 and HP1 signals. This can be used to hide short drops in the pressure or vacuum circuit.

The duration of the switch-off delay can be set for all three signals using the parameter [dL] in the configuration menu, or via IO-Link. Selectable values are 10, 50 and 200 ms. To deactivate this function, enter the value [000] (= off).

The switch-off delay affects the process data bits in IO-Link and the H1 and H2 status indicators.

7.9 Rotating the Display [0x004F]

To allow different installation positions, the orientation of the display can be rotated by 180° by changing the parameter [dP4] in the configuration menu or via IO-Link.

The factory setting is [5E d]. This corresponds to the standard configuration.

To rotate the display by 180°, select the parameter setting [r 0E].

 With the display rotated, the  and  buttons switch functions. The Down button becomes the Up button.

The decimal points of the display are shown on the top edge of the screen.

When the display is rotated, the decimal point on the far right is no longer displayed and is therefore missing from the display of the counters and serial numbers.

7.10 ECO Mode [0x004C]

The ejector offers the option of switching off the display or dimming it to save energy. If ECO mode is activated, the display is switched off to reduce system power consumption after 1 minute if no buttons are pressed.

ECO mode can be enabled and disabled with the parameter [E C 0] in the configuration menu or via IO-Link.

Three different settings are available:

- [0FF]: Energy-saving mode is disabled.
- [L 0]: The brightness of the display is reduced by 50 percent after 1 minute.
- [00]: The display switches off after one minute of inactivity.

The display is reactivated by pressing any button or by an error message.

 If you activate ECO mode using IO-Link, the display will immediately enter energy-saving mode.

7.11 Locking and Unlocking the Menus

The menus can be protected from unwanted access by means of a PIN code [P 10] or in the IO-Link using Device Access Locks. The current settings are still displayed.

The PIN is set to 000 on delivery. The menus are not protected.

 A PIN is recommended because carrying out parameterization while the device is in operation can change the status of signals.

7.11.1 PIN Code [0x004D]

To enable the lock, a valid PIN code between 001 and 999 must be entered in parameter [P 10] in the configuration menu or via IO-Link.

When the lock is active, [L 00] flashes in the display or the PIN code is requested.

The following describes how to set a PIN Code using the operating and display element.

1. Press the  button for at least three seconds.
 - ⇒ The display will flash [-C-] during this process.
 - ⇒ The configuration menu opens.
2. Use the  or  button to select the parameter [P 10].
3. Confirm using the .

4. Use the  or  button to enter the first digit of the PIN code
 5. Confirm using the  button.
 6. Enter the remaining digits in the same way.
 7. Press the  button to save the PIN code.
- ⇒ The menus are now locked.

The PIN code "000" must be set for permanent deactivation of the lock.

Full access to the device is still possible via IO-Link even if a PIN is enabled. The current PIN can also be read out and changed/deleted (PIN = 000) via IO-Link.

7.11.2 Unlocking the Menus

Menus can be protected against unauthorized access by defining a PIN code [  ] in the configuration menu. When the lock is active, [  ] flashes in the display or the PIN code is requested.



Tips and Tricks for Parameter Setting

- By pressing the  or  button for approx. 3 seconds, the value to be changed is scrolled through quickly
- If you exit the modified value by briefly pressing , the value will remain unchanged.

The menus can be unlocked as follows:

1. Press the  button.
 2. Use the  or  button to enter the first digit of the PIN code
 3. Confirm using the  button.
 4. Enter the remaining digits in the same way.
 5. Press the  button to unlock the menu.
- ⇒ When a valid PIN is entered, the message [  ] is displayed.
- ⇒ When an invalid PIN is entered, the message [  ] is displayed and the menus remain locked.

The lock is automatically activated once more when the selected menu is closed or the desired function has been completed. The PIN code 000 must be set for permanent deactivation of the lock.

The PIN is set to 000 on delivery. The menus are not protected.



If you cannot remember the correct PIN code, read or reset the PIN code from the IO-Link, or use NFC to reset to factory settings.

7.11.3 Restricting Access Using Device Access Locks [0x000C]

In IO-Link mode, the "Device Access Locks" default parameter is available to prevent changes to parameter values using the operating element of the ejector.

A menu lock using the Device access locks parameter has a higher priority than the menu PIN. In other words, this lock cannot be bypassed by entering a PIN, and remains in place.

It can only be canceled using IO-Link, not on the ejector itself.

7.11.4 Restricting Access with Extended Device Access Locks [0x005A]

The Extended Device Access Locks gives you the following options:

- Block all NFC access or restrict it to read-only functions. The NFC lock using the extended device access locks parameter has a higher priority than the NFC PIN. That means that this lock also cannot be bypassed by entering a PIN.
- Block the use of manual mode.
- Block the transmission of IO-Link events.

7.12 Resetting to Factory Settings (Clear All) [0x0002]

This function is used to reset the following configurations to their factory settings:

- The configuration of the ejector
- The initial setup
- The production setup profile settings
- The IO-Link parameter "Application specific tag"

This function is executed using the parameter [rES] in the configuration menu or via IO-Link.

The factory settings for the ejector are listed under (> See *ch. Factory Settings, Page 17*) in the Technical Data section.



⚠ WARNING

By activating/deactivating the product, output signals lead to an action in the production process!

Personal injury

- ▶ Avoid possible danger zone.
- ▶ Remain vigilant.

A description of how to reset the ejector to factory settings using the display and operating element follows:

1. Press the  button for at least three seconds.
 2. Use the  or  button to select the parameter [rES].
 3. Confirm using the  button.
 4. Use  or  to select the required setting parameter [YES].
 5. If the menu is locked: Enter a valid PIN code.
 6. Confirm using the  button.
- ⇒ The ejector is reset to the factory settings.

The reset to factory settings function does not affect the following elements:

- The counter readings
- The zero-point adjustment of the sensors

7.13 Counters

The ejector has three internal, non-erasable counters and three erasable counters.

Counters 1 [cc 1] and [ct 1] increase with every valid "Suction" signal pulse, and thus count the ejector's suction cycles.

Counters 2 [cc 2] and [ct 2] count the suction valve's switching cycles, and counters 3 [cc 3] and [ct 3] count the CM events.

| ISDU [Hex] | Display code | Function | Description |
|------------|--------------|---------------------|--|
| 0x008C | cc 1 | Counter 1 | Counter for suction cycles (suction signal) |
| 0x008D | cc 2 | Counter 2 | Counter for suction valve switching frequency |
| 0x008E | cc 3 | Counter 3 | Counter for condition monitoring events |
| 0x008F | ct 1 | Counter 1, erasable | Counter for suction cycles (Suction signal) – erasable |
| 0x0090 | ct 2 | Counter 2, erasable | Counter for suction valve switching frequency – erasable |
| 0x0091 | ct 3 | Counter 3, erasable | Counter for condition monitoring events, erasable |

The counters can be displayed or read out from the system menu using the parameters listed in the table, or via IO-Link.

Displaying a Counter on the Operating Panel of the Ejector:

- ✓ The required counter is selected in the system menu.
- ▶ Confirm the counter by pressing the  button.
- ⇒ The last three decimal places of the counter total are displayed. The decimal point at the far right lights up. This corresponds to the least significant three digits.

Use the  and  buttons to display the remaining decimal places of the counter total. The decimal points show which three-digit block of the counter total is shown in the display.

The counter total is comprised of the three digit blocks together as follows:

| Displayed section | 10 ⁶ | 10 ³ | 10 ⁰ |
|-------------------|-----------------|-----------------|-----------------|
| Digit block | 0.48 | 6 18 | 593. |

The current counter total in this example is 48 618 593.

Erasing Counters [0x0002]

There are two different ways of resetting the erasable counters to 0:

- Using system commands via IO-Link
- Using the control panel
- ✓ The system menu is selected.
- 1. Use the  button to select the parameter [rc 1], then press  to confirm.
- 2. Use the  or  button to select [YES], then press  to confirm.
- ⇒ All the erasable counters are reset to 0.

7.14 Displaying the Software Version [0x0017]

The software version indicates the software currently running on the internal controller.

The system firmware can be updated using the "Firmware Update" profile defined by IO-Link. If necessary, this will also update the firmware for the valve module. The PD bit In Byte 1.2 signals when a more recent version is available in the supply module.

7.15 Displaying the Serial Number [0x0015]

The serial number indicates the production period of the ejector.

✓ Open the system menu.

1. Use the  or  button to select the parameter [500].

2. Confirm using the  button.

⇒ The first three decimal places of the serial number will be displayed (the digits $\times 10^6$). The decimal point at the far left lights up. This corresponds to the three-digit block with the highest perceived value.

3. Use the  and  buttons to display the remaining decimal places of the serial number.

The decimal points show which three-digit block of the serial number is shown in the display.

The serial number consists of 3 number blocks:

| Displayed section | 10^6 | 10^3 | 10^0 |
|-------------------|--------|--------|--------|
| Digit block | 0.48 | 618 | 593 |

The current serial number in this example is 48 618 593.

▶ To exit the function, press the  button.

7.16 Displaying the Part Number [0x00FA]

The part number both appears on the label on the ejector, and is stored electronically.

✓ Open the system menu.

1. Use the  or  button to select the part number parameter [A0E].

2. Confirm using the  button.

⇒ The first two digits of the part number are displayed.

3. The remaining digits of the part number are displayed with the  button. The displayed decimal points are part of the part number.

The part number consists of 4 number blocks with a total of 11 digits.

| Displayed section | 1 | 2 | 3 | 4 |
|-------------------|-----|-----|-----|-----|
| Digit block | 10. | 020 | 200 | 383 |

The part number in this example is 10.02.02.00383.

▶ To exit the function, press the  button.

7.17 Production setup profiles

In IO-Link mode, the ejector can store up to four different production setup profiles (P-0 to P-3). All important parameter data for workpiece handling is stored in these profiles. The profile is selected by means of the process data byte PDO byte 0. Thus parameters can be adjusted to suit differing process conditions.

The currently selected data set is displayed in the parameter data under "Production Setup". This data set corresponds to the current parameters the ejector is working with, which can be viewed using the menu.

Displaying the parameter data set (P-0 to P-3) currently in use during IO-Link operation:

- ▶ Select the main menu using the  button.
- ⇒ The parameter data set (P-0 to P-3) currently in use is briefly shown in the display.

In the default setting, the P-0 production setup profile is selected.

Then menus can only be used to adjust the profile that is currently selected via IO-Link.

7.18 Energy and Process Control (EPC)

In IO-Link mode, the energy and process control (EPC) function is available. It is subdivided into three modules:

- Condition monitoring (CM): Condition monitoring to increase system availability
- Energy monitoring (EM): Energy monitoring to optimize the vacuum system's energy consumption
- Predictive maintenance (PM): Predictive maintenance to increase the performance and quality of the gripping systems

7.18.1 Condition Monitoring (CM) [0x0092]


Monitor Valve Switching Frequency

When the air saving function is activated and there is a high leakage level in the gripping system, the ejector switches between the Suction and Suction Off states very frequently. The number of valve switching procedures thus increases rapidly within a short time.

To protect the ejector and increase its service life, the ejector automatically deactivates the air saving function and switches to continuous suction if the switching frequency $> 6/3$ s (more than 6 switching operations within 3 seconds). In this case the ejector remains in the Suction state.


It also issues a warning and sets the corresponding condition monitoring bit.

Diagram of Valve Switching Frequency

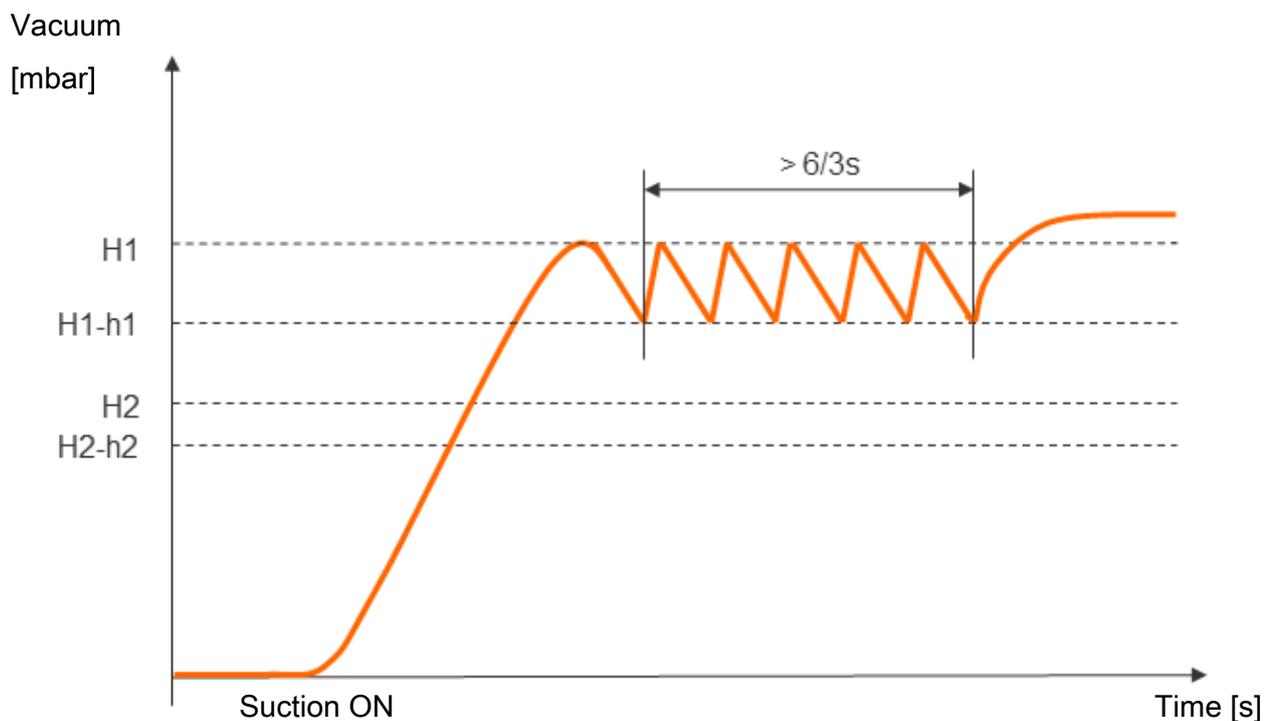

Evacuation Time Monitoring

If the measured evacuation time t_1 (from H2 to H1) exceeds the specified value, the "Evacuation time longer than t_1 " condition monitoring warning is triggered and the system status light switches to yellow.

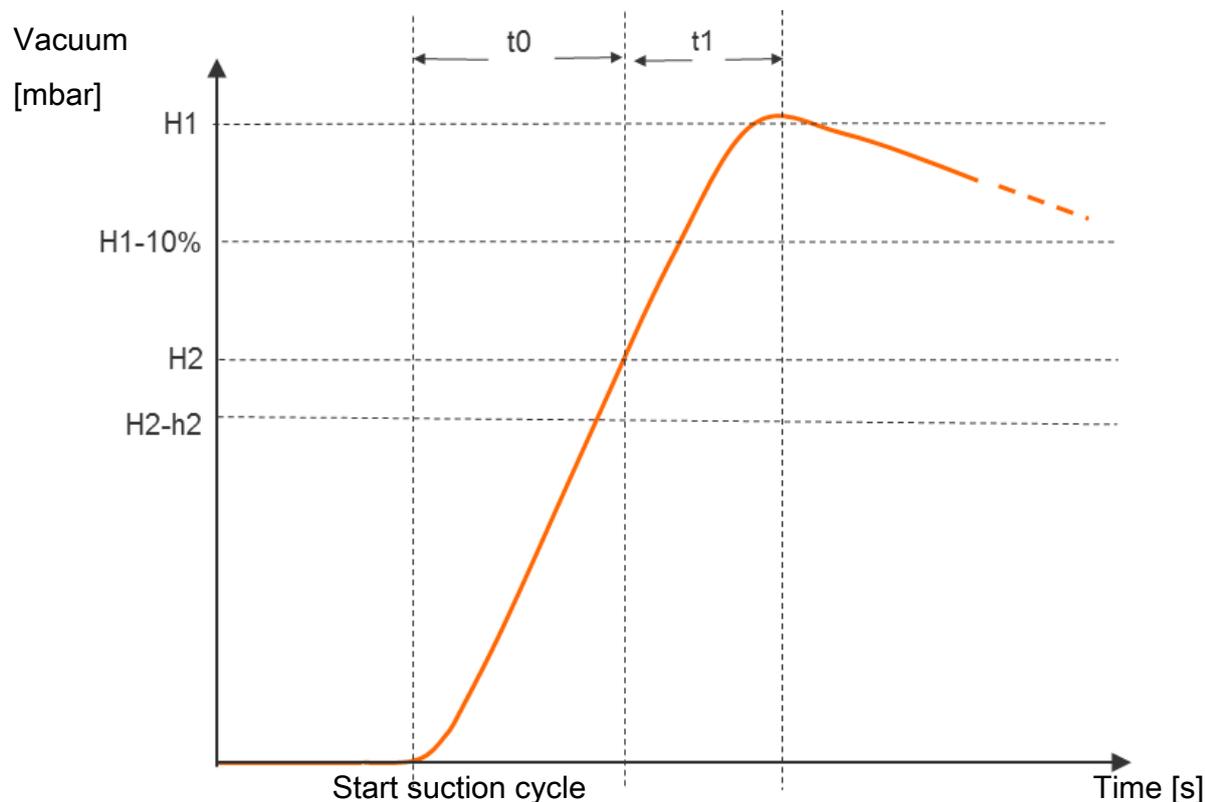

The specified value for the max. permitted evacuation time can be set in the configuration menu with the parameter [E - 1] or via IO-Link [0x006B]. Setting the value to [000] (= off) deactivates monitoring. The maximum permitted evacuation time setting is 9.99 s.

Measuring the Evacuation Time t_0 and t_1

Measuring the evacuation time t_0 :

The time is measured (in ms) from the beginning of the suction cycle to the time when the limit value H2 is reached.

Measuring the evacuation time t_1

The interval between reaching the limit values H2 and H1 is measured in milliseconds.

Measuring Leakage

In control mode ([C E r] = [0n5] or [0n]), the vacuum drop/leakage over a certain period of time is measured (as vacuum drop per time unit in mbar/s) after the air saving function has interrupted suction because switching point H1 has been reached. The measured leakage value "L" in mbar/s can be queried via IO-Link.

Leakage Monitoring and Evaluation

In control mode ([C E r] = [0n]), the loss of vacuum within a certain period is monitored (mbar/s).


Evaluation of the leakage level differentiates between two states:

Leakage L < permitted value -L-

- If the leakage L is less than the set value -L-,
- the vacuum continues dropping until the reset point rP1 is reached.
 - The ejector begins to suck again (normal control mode)

Leakage L > permitted value -L-

If the leakage L is greater than the set value -L-, the display will alternately show the parameter $-L-$ and the vacuum level.

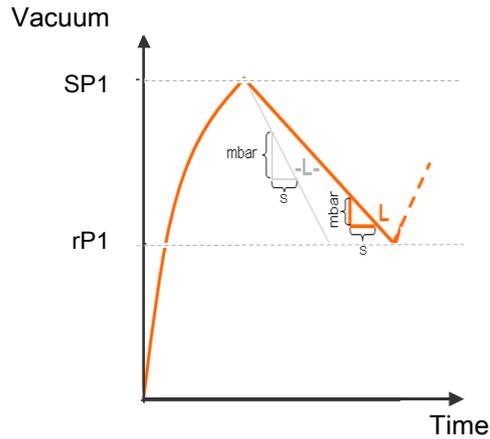

The permitted leakage value -L- can be set in the Extended Functions menu with the parameter $[-L-]$.

Control Threshold Monitoring

If the switching point H1 is never reached during the suction cycle, the "H1 not reached" condition monitoring warning is triggered and the system status light switches to yellow.

This warning is available at the end of the current suction phase and remains active until the next suction cycle.

Monitor Dynamic Pressure

If possible, a dynamic pressure measurement is taken at the start of every suction cycle (vacuum during unobstructed suction). The result of this measurement is compared to the limit values set for H1 and H2. If the dynamic pressure is greater than (H2 – h2) but less than H1, the corresponding condition monitoring warning is triggered and the status light switches to yellow.

Monitoring the Supply Voltages



The ejector is not a voltage meter! However, the measured values and the system responses derived from them provide a helpful diagnostics tool for condition monitoring.

The ejector measures the level of the U_s and U_A supply voltages. The measured values can be read from the parameter data.

If the voltages are outside the valid range, the following status messages change:

- Device status
- Condition monitoring parameter
- An IO-Link event is generated

In case of undervoltage, the valves are no longer activated and the ejector returns to its basic setting:

- The NO ejector switches to Suction mode.
- The NC ejector switches to Pneumatically OFF mode.
- The IMP ejector remains in its current mode ("Suction" or "Pneumatically OFF").

If the ejector is in manual mode, it exits manual mode.

A condition monitoring event is also generated If there is an overvoltage.

Condition Monitoring Events and Status Display [0x0092]

Any condition monitoring events that occur during the suction cycle cause the system status indicator light to immediately switch from green to yellow. The event that caused this switch can be seen in the "Condition monitoring" IO-Link parameter.

The table below explains the coding of the condition monitoring warnings:

| Bit | Event | Update |
|-----|--|---|
| 0 | Valve protection function activated | Cyclic |
| 1 | Set limit value $t-1$ for evacuation time exceeded | Cyclic |
| 2 | Set leakage limit value $-L$ exceeded | Cyclic |
| 3 | Limit value $H1$ was not reached | Cyclic |
| 4 | Dynamic pressure $> (H2 - h2)$ and $< H1$ | As soon as a corresponding dynamic pressure value has been determined |
| 5 | Supply voltage U_s outside the operating range | Constant |
| 6 | Supply voltage U_A outside the operating range | Constant |
| 7 | Specified system pressure during suction process too low | Constant |
| 8 | Preset system pressure outside the operating range | Constant |

Bits 0 to 3 describe events that can only occur once per suction cycle. They are reset at the start of every suction cycle and remain stable until it has ended.

Bit number 4, which describes dynamic overpressure, is initially deleted when the device is switched on and is updated when a dynamic pressure value is detected.

Bits 5 to 8 are regularly updated independently of the suction cycle, and reflect the current values for the supply voltage and system pressure.

The values measured by the condition monitoring system, namely the evacuation times t_0 and t_1 and the leakage value L , are reset at the beginning of the suction process and updated once they have been measured.

7.18.2 Energy Monitoring (EM) [0x009B, 0x009C, 0x009D]

In order to optimize the efficiency of vacuum gripping systems, the ejector provides a function for measuring and displaying the energy and air consumption.

When measuring air consumption as a percentage, the ejector calculated the air consumption from the last suction cycle as a percentage. This value corresponds to the ratio for the full duration of the suction cycle and the active suction and blow-off times.

The -PC- measures the operating pressure directly.

In variants without a pressure sensor, an externally recorded pressure value can be supplied using the IO-Link process data. If this value is available, absolute air consumption measurement can be performed in addition to the percentage-based air consumption measurement. The actual air consumption of a suction cycle is calculated taking the system pressure and nozzle size into account, and specified in standard liters [NL]. The measured value is reset at the beginning of the suction cycle and constantly updated during the running cycle. As such, no further changes can occur once blow-off is complete.

The electrical energy consumed by the device and by the valve coils during a suction cycle is measured and given in watt-seconds (Ws).

For determining the electrical energy consumption, the neutral phase of the suction cycle must also be considered. Therefore the measured values can be updated only when the next suction cycle begins. During the entire cycle, they represent the results from the previous cycle.



The ejector is not a calibrated measuring device. However, the values may be used as a reference and for comparison measurements.

7.18.3 Predictive Maintenance (PM)

Overview of Predictive Maintenance (PM)

In order to allow early detection of wear and other impairments to the vacuum gripping system, the ejector provides functions for recognizing trends in the quality and performance of the system. This is accomplished using the measured values for leakage and dynamic pressure.

The measurement value for the leakage rate and the related quality assessment in percent are reset at the start of every suction cycle and constantly updated during the cycle as moving averages. The values therefore remain stable until after the suction cycle is complete.

Measurement of Leakage

The control function interrupts suction as soon as it reaches the limit value SP1. Then the leakage is measured as the vacuum decrease over time (in mbar/s).

Dynamic Pressure Measurement

This measures the system vacuum achieved during unobstructed suction. The measurement length is approx. 1 s. Thus evaluation of a valid dynamic pressure value requires at least one second of unobstructed suction after the suction cycle has commenced. The suction point must not be occupied by a component at this time.

Measured values below 5 mbar or above the limit value H1 are not regarded as valid dynamic pressure measurements and are discarded. The result of the last valid measurement is retained.

Measured values that are below the limit value H1 but simultaneously above the limit value H2 – h2 result in a condition monitoring event.

The dynamic pressure and the percentage performance value based on it are initially unknown when the ejector is switched on. As soon as a dynamic pressure measurement can be performed, the dynamic pressure and the performance evaluation are updated and retain their values until the next dynamic pressure measurement.

Quality Assessment [0x00A2]

In order to evaluate the entire gripping system, the ejector calculates a quality rating based on the measured system leakage.

The greater the leakage in the system, the worse the quality rating of the gripping system. Conversely, low leakage results in a high quality rating.

Performance Calculation [0x00A3]

The performance calculation helps in evaluating the system status. The performance of the gripping system can be assessed based on the measurement of the dynamic pressure.

Optimal configuration of gripping systems leads to low dynamic pressure and thus to high performance. Conversely, badly configured systems achieve low performance.

Dynamic pressure events that exceed the limit value (H2 – h2) always result in a performance rating of zero percent. A dynamic pressure value of 0 mbar (which indicates that no valid measurement value could be obtained) also results in a performance rating of zero percent.

7.18.4 Reading the EPC Values

The results of the condition monitoring function are also available in the ejector's process input data. However, to ensure that the different pairs of values can be read using a controller program, the EPC-Select acknowledged bit is provided in the process input data.

Proceed as follows to read the EPC values:

1. Start with EPC-Select = 00.
2. Create the selection for the next value pair you require, e.g. EPC-Select = 01.
3. Wait until the EPC-Select acknowledged bit changes from 0 to 1.
 - ⇒ The transmitted values correspond to the selection you have created, and can be adopted by the control system.
4. Switch back to EPC-Select = 00.
5. Wait until the EPC-Select acknowledged bit is reset to 0.
6. Repeat the same procedure for the next value pair, e.g. EPC-Select = 10.

8 Transport and Storage

8.1 Checking the Delivery

The scope of delivery can be found in the order confirmation. The weights and dimensions are listed in the delivery notes.

1. Compare the entire delivery with the supplied delivery notes to make sure nothing is missing.
2. Damage caused by defective packaging or occurring in transit must be reported immediately to the carrier and J. Schmalz GmbH.

9 Installation

9.1 Installation Instructions



CAUTION

Improper installation or maintenance

Personal injury or damage to property


- ▶ During installation and maintenance, make sure that the ejector is disconnected and depressurized and that it cannot be switched on again without authorization.

For safe installation, the following instructions must be observed:

1. Use only the connections, mounting holes and attachment materials that have been provided.
2. Carry out mounting and removal only when the device is in an idle, depressurized state.
3. Pneumatic and electrical line connections must be securely connected and attached to the ejector.

9.2 Installation

The ejector may be installed in any position.

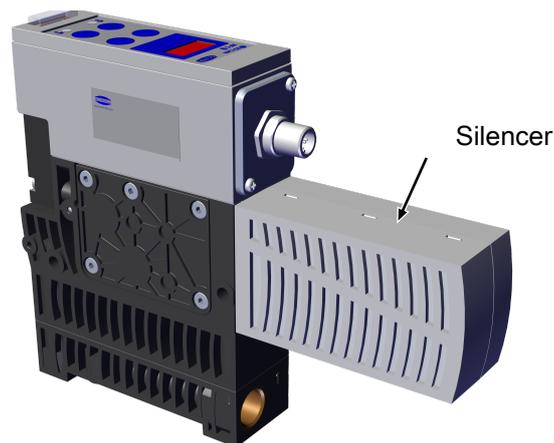


When installing the ejector, make sure that the area around the silencer remains free, so that unimpeded discharge of the escaping air is ensured.

The ejector can be mounted in a number of different ways:


1.) Side mounting

- ▶ There are two 5.5 mm through-holes for mounting the ejector. Use screws at least 50 mm in length. Use washers if you are using M4 fastening screws for the mounting process. The ejector is to be fixed with at least 2 screws, the maximum tightening torque is 4 Nm.

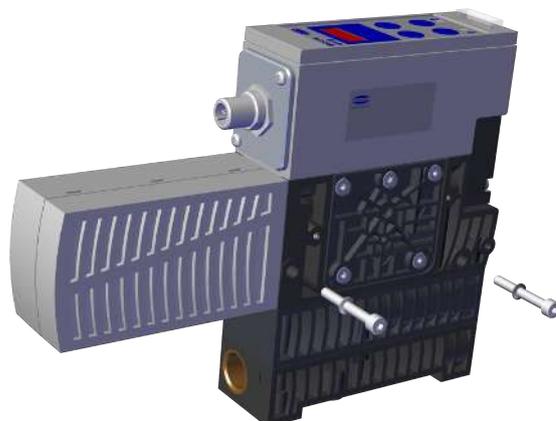


2.) Underside mounting


- ▶ Use the two M5-IG threads on the underside of the ejector for mounting. The maximum tightening torque is 2 Nm.

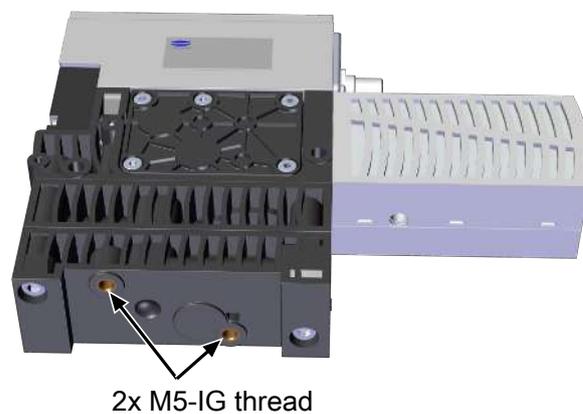

3.) Mounting using the Quick Change adapter

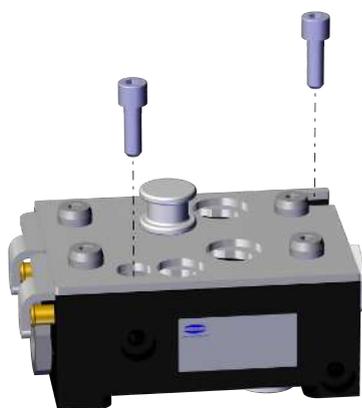

a) Top attachment

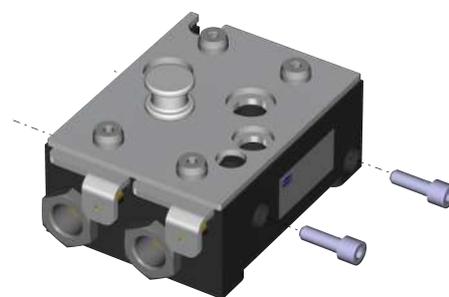


b) Side attachment

- ✓ Mount the Quick Change adapter mechanically using two M6 Allen screws (ISO 4762).




Compressed air at 1

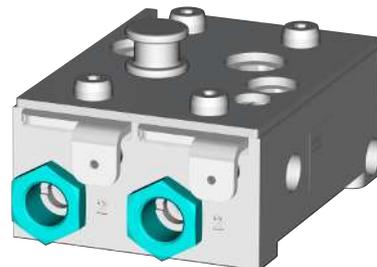


Vacuum at 2

- ✓ Connect the pneumatic systems: compressed air to the connection marked 1 (G3/8"); vacuum to the connection marked 2 (G3/8").
- ✓ Ensure that the pneumatic systems are depressurized.


1. Push the release level in as far as it will go and hold it in this position.

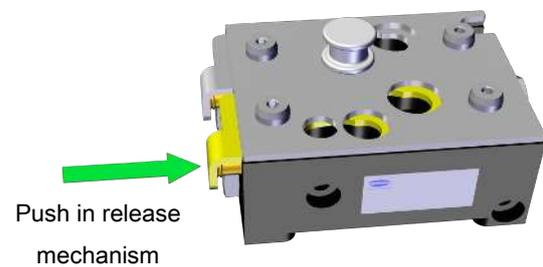


⇒ "Released" position

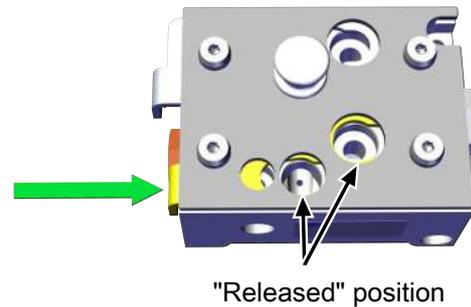

2. Ensuring that the centering pins are aligned correctly, place the ejector on the Quick Change adapter and push it down as far as it will go.

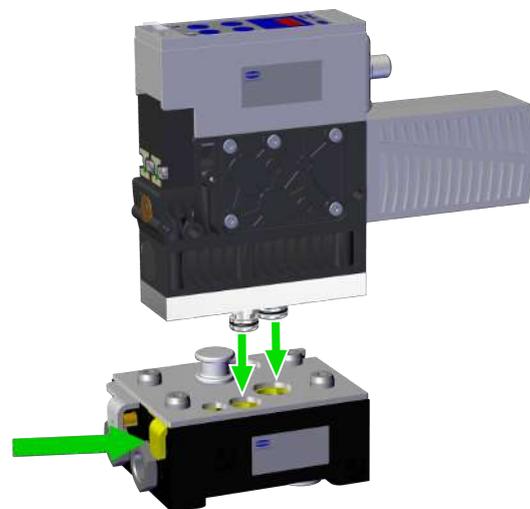

3. Allow the release lever to extend back to its original position.

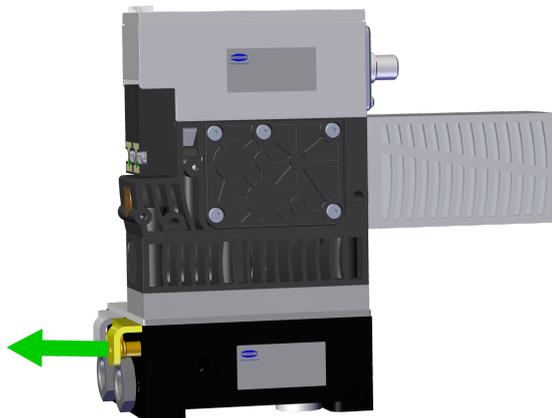

⇒ The ejector is now attached to the Quick Change adapter and connected to the pneumatic systems.

For start of operations, the ejector must be connected to the controller via the connection plug with a connection cable. The compressed air supply must be supplied by the higher-level machine.

The installation process is described and explained in detail below.

9.3 Pneumatic connection



⚠ CAUTION

Compressed air or vacuum in direct contact with the eye

Severe eye injury

- ▶ Wear eye protection
- ▶ Do not look into compressed air openings
- ▶ Do not look into the silencer air stream
- ▶ Do not look into vacuum openings, e.g. suction cups



⚠ CAUTION

Noise pollution due to incorrect installation of the pressure and vacuum connections

Hearing damage

- ▶ Correct installation.
- ▶ Wear ear protectors.

9.3.1 Connecting the Compressed Air and Vacuum

How to Perform Pneumatic Connection for Ejector Variant H



1 Compressed air connection

2 Vacuum connection


The compressed air connection G3/8" is marked with the number 1 on the ejector.

- ▶ Connect compressed air hose. The max. tightening torque is 6 Nm.

The vacuum connection G3/8" is marked with the number 2 on the ejector.

- ▶ Connect vacuum hose. The max. tightening torque is 6 Nm.

How to Perform Pneumatic Connection for Ejector Variant Q

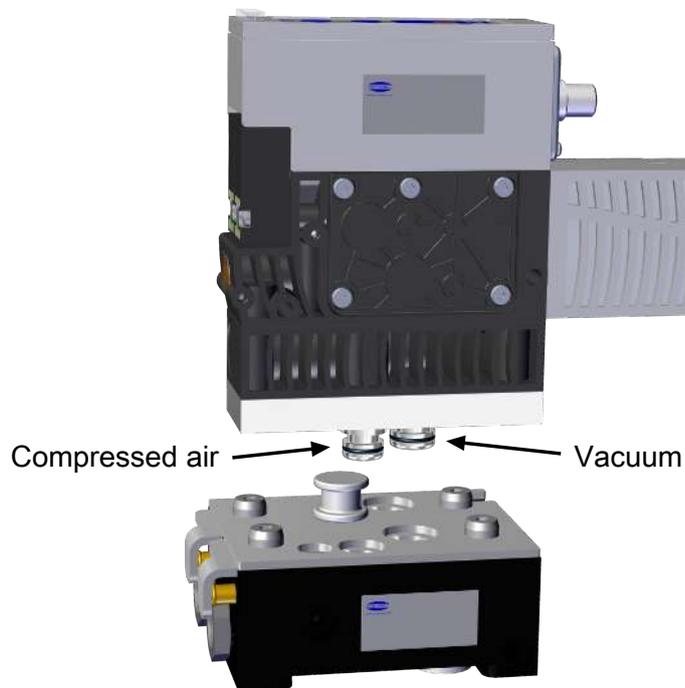

- ▶ The pneumatic connection is performed by connecting the ejector plug to the Quick Change adapter.

9.3.2 Instructions for the Pneumatic Connection

Use only screw unions with cylindrical G-threads for the compressed air and vacuum connection!

To ensure problem-free operation and a long service life of the ejector, only use adequately maintained compressed air and consider the following requirements:

- Use of air or neutral gas in accordance with EN 983, filtered 5 µm, oiled or unoiled.
 - Dirt particles or foreign bodies in the ejector connections, hoses or pipelines can lead to partial or complete ejector malfunction.
1. Shorten the hoses and pipelines as much as possible.
 2. Keep hose lines free of bends and crimps.
 3. Only use a hose or pipe with the recommended internal diameter to connect the ejector, otherwise use the next largest diameter.
On the compressed air side, ensure that the internal diameter is wide enough for the ejector to achieve its performance data (8 mm).
On the vacuum side, ensure that the internal diameter is wide enough to avoid high flow resistance (9 mm). If the internal diameter is too small, the flow resistance and the evacuation times increase and the blow off times are extended.

Internal diameters based on a maximum hose length of 2 m.

- ▶ For longer hose lengths, the cross-sections must also be larger.

9.4 Operation Using IO-Link Class B

When the ejector is operated in IO-Link mode (digital communication), the supply voltages, the ground and the communication cable for the IO-Link (C/Q cable) are connected directly to the IO-Link class B master (point-to-point connection). Several C/Q wires cannot be connected to just a single IO-Link master port.

Connecting the ejector via the IO-Link provides access to a number of additional ejector functions alongside the basic functions of suction, blow-off, feedback, etc. These additional functions are:

- The current vacuum level
- Selection of four production profiles
- Errors and warnings
- Ejector system status display
- Access to all parameters
- Functions for energy and process control

So that all the modifiable parameters can be read directly via the higher-level controller, modified and written back to the ejector.

Evaluation of the condition monitoring and energy monitoring results allows you to draw direct conclusions regarding the current handling cycle and perform trend analysis. The ejector supports the IO-Link revision 1.1 with four bytes of input data and two bytes of output data. It is also compatible with IO-Link masters that use the 1.0 revision. In this case, one byte of input data and one byte of output data are supported. The exchange of process data between the IO-Link master and the ejector is cyclical. Parameter data (acyclical data) is exchanged by the user program in the controller using communication modules.

9.5 Electrical Connection



NOTE

Change of output signals when product is switched on or plug is connected

Personal injury or damage to property

- ▶ Electrical connection may be performed only by specialists who can evaluate the effects of signal changes on the overall system.



NOTE

Incorrect power supply


Destruction of the integrated electronics

- ▶ Operate the product using a power supply unit with protected extra-low voltage (PELV).
- ▶ The system must incorporate safe electrical cut-off of the power supply in compliance with EN60204.
- ▶ Do not connect or disconnect the connector under tension and/or when voltage is applied.

The electrical connection is established using a 5-pin M12 connector that supplies the ejector with voltage and communicates via IO-Link. The pin assignment of the M12 connector corresponds to the IO-Link class B specification.

Connecting the Ejector Electrically Using Plug Connection 1 as Shown in the Figure

- ✓ Prepare an M12 5-pin connection cable with a socket (customer's responsibility).

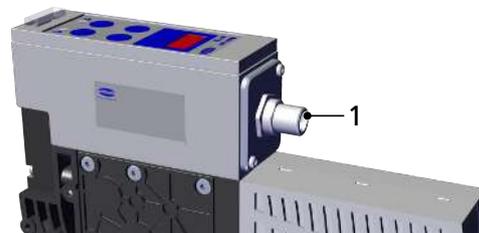

- ▶ Attach the connection cable to the ejector, maximum tightening torque = hand-tight.

Observe the following connection instructions:

- The ejector has potential separation between the sensor supply and the actuator supply.
- The maximum length of the electrical supply line is 20 meters in accordance with the IO-Link specification.

9.5.1 Pin Assignment of M12 connector for IO-Link Class B

Electrical interface 1x M12 – A-coded pin assignment according to IO-Link class B.

| M12 connector | PIN | Symbol | Wire color ¹⁾ | Function |
|---------------|-----|---------|--------------------------|---------------------------|
| | 1 | U_s | Brown | Power supply for sensor |
| | 2 | U_A | White | Power supply for actuator |
| | 3 | GND_s | Blue | Sensor ground |
| | 4 | C/Q | Black | IO-Link |
| | 5 | GND_A | Gray | Actuator ground |

¹⁾ When using a Schmalz connection cable (see “Accessories”)

10 Operation

10.1 General Preparations



⚠ WARNING

Extraction of hazardous media, liquids or bulk material

Personal injury or damage to property!

- ▶ Do not extract harmful media such as dust, oil mists, vapors, aerosols etc.
- ▶ Do not extract aggressive gases or media such as acids, acid fumes, bases, biocides, disinfectants or detergents.
- ▶ Do not extract liquids or bulk materials, e.g. granulates.

Always carry out the following tasks before activating the system:


1. Before each use, check that the safety features are in perfect condition.
2. Check the ejector for visible damage and deal with any problems immediately (or notify your supervisor).
3. Ensure that only authorized personnel are present in the working area of the machine or system and that no other personnel are put in danger by switching on the machine.

There must be no people in the system danger area while it is in operation.

10.2 Changing the Blow-Off Flow Rate on the Ejector



Do not overwind the stop on the valve screw. A minimum flow rate of approx. 20 % is always necessary for technical reasons. The blow-off volume flow can be set between 20 % and 100 %.

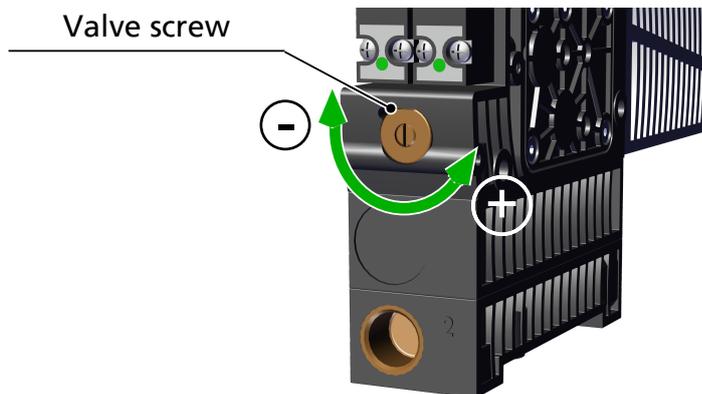

There is a valve screw below the pilot valve that can be used to adjust the blow-off flow rate. The valve screw is equipped with a stop on both sides.

1. Turn the valve screw clockwise to reduce the flow rate.
2. Turn the valve screw counterclockwise to increase the flow rate.

11 Troubleshooting

11.1 Help with Malfunctions

| Error | Possible cause | Solution |
|--|---|---|
| Master or peripheral power supply disturbed | Connection to IO-Link master with IO-Link class-A port | ▶ Connection to IO-Link class B port |
| No communication | Incorrect electrical connection | ▶ Check electrical connection and pin assignment |
| | Higher-level controller not correctly configured | ▶ Check the controller configuration |
| | IODD connection does not work | ▶ Check for the appropriate IODD |
| No NFC communication | NFC connection between ejector and reader (e.g. smartphone) not correct | ▶ Hold the reader at the intended position on the ejector |
| | NFC function on reader (e.g. smartphone) not activated | ▶ Activate NFC function on reader |
| | NFC deactivated on ejector | ▶ Activate NFC function on ejector |
| | Write operation canceled | ▶ Hold the reader at the intended position on the ejector |
| No parameters can be changed using NFC | PIN code for NFC write protection activated | ▶ Enable NFC write permissions |
| Ejector does not respond | No actuator supply voltage | ▶ Check electrical connection and PIN assignment |
| | No compressed air supply | ▶ Check the compressed air supply |
| Vacuum level is not reached or vacuum is built up too slowly | Press-in screen is contaminated | ▶ Replace screen |
| | Silencer is soiled | ▶ Replacing the Silencer |
| | Leakage in hose line | ▶ Check hose connections |
| | Leakage at suction cup | ▶ Check suction cup |
| | Operating pressure too low | ▶ Increase operating pressure. Note the maximum limits! |
| | Internal diameter of hose line too small | ▶ Observe recommendations for hose diameter |
| Load cannot be held | Vacuum level too low | ▶ Increase the control range for the air saving function |
| | Suction cup too small | ▶ Select a larger suction cup |
| No display on the screen | ECO mode activated | ▶ Press any button or deactivate ECO mode |
| | Incorrect electrical connection | ▶ Check electrical connection and PIN assignment |
| Display shows error code | See "Error codes" table | ▶ See "Error Codes" table in the following chapter |

| Error | Possible cause | Solution |
|---|---|--|
| IO-Link warning message "Leakage too high" although handling cycle is working optimally | Limit value -L- (permissible leakage per second) set too low | ▶ Determine typical leakage values in a good handling cycle and set as limit value |
| | Limit values H1 and h1 for leakage measurement set too low | ▶ Set limit values in such a way that there is a clear differentiation between the neutral and suction system statuses |
| IO-Link warning message "Leakage too high" does not appear although there is high leakage in the system | Limit value -L- (permissible leakage per second) set too high | ▶ Determine typical leakage values in a good handling cycle and set as limit value |
| | Limit values H1 and h1 for leakage measurement set too high | ▶ Set limit values in such a way that there is a clear differentiation between the neutral and suction system statuses |

11.2 Error Codes, Causes and Solutions

The condition monitoring functions output events that can be used to draw conclusions with regard to the process. If a known error occurs, it is transmitted via the IO-Link ISDU parameter [0x0082] in the form of an error number.

The system status is automatically refreshed on the NFC tag every 5 minutes at the latest. That means that an error may be displayed via NFC even though it has already disappeared.

| Error code/ Display code | Fault | Possible cause | Solution |
|-----------------------------|--|---|---|
| E01 | Internal error Electronics | Operating voltage was disconnected too quickly after a parameter change, saving process was not complete. | <ol style="list-style-type: none"> 1. Clear the error by restoring the factory setting with the [rES] function or parameter. 2. Use engineering tool to import a valid dataset. 3. If error [E01] occurs again after restarting the supply voltages: Replacement by Schmalz required |
| E03 | Zero-point error/ calibration error on vacuum sensor | Zero-point adjustment for vacuum sensor is outside of the tolerance 3% FS. Calibration was canceled when measurement value was too high or too low. | <ol style="list-style-type: none"> 1. Ventilate the vacuum circuit. 2. Perform calibration. |
| E04 | Zero point error/ calibration error on compressed air sensor | Zero-point adjustment for compressed air sensor is outside of the tolerance 3% FS. Calibration was canceled when measurement value was too high or too low. | <ol style="list-style-type: none"> 1. Depressurize the system. 2. Perform calibration. |
| E05 | Undervoltage U_A | Actuator supply voltage U_A too low or not present | <ol style="list-style-type: none"> 1. Check power supply unit and power load. 2. Increase supply voltage |
| E07 | Undervoltage U_S | Sensor supply voltage is too low. | <ol style="list-style-type: none"> 1. Check power supply unit and power load 2. Increase supply voltage |

| Error code/ Display code | Fault | Possible cause | Solution |
|--------------------------------|-------------------------------|--|--|
| E 08 | IO-Link error | Connection to master interrupted. | <ol style="list-style-type: none"> 1. Check connection line. 2. Repeat the power up process. |
| E 15 | Overvoltage U_A | Actuator supply voltage is too high. | <ol style="list-style-type: none"> 1. Check power supply unit. 2. Reduce supply voltage |
| E 17 | Overvoltage U_s | Sensor supply voltage is too high. | <ol style="list-style-type: none"> 1. Check power supply unit. 2. Reduce supply voltage |
| FFF | Vacuum range | Measured vacuum level too high, sensor defective | <ol style="list-style-type: none"> 1. Check and adjust supply pressure. 2. Replacement by Schmalz required |
| -FF | Overpressure in vacuum system | Ejector in "Blow-off" mode | No error! Overpressure display |
| E 90 | Manual mode | Manual mode locked by IO-Link. | <ul style="list-style-type: none"> ▶ If necessary, use IO-Link to enable manual mode. |

11.3 System condition monitoring (CM)

The overall status of the ejector system is displayed as a status traffic light using 2 bits of process data input byte 0. All warnings and errors are taken into account when defining the status of the display.

This basic display provides immediate information about the status of the ejector.

The table below shows and explains the various status traffic light patterns:

| Displayed system status | Description of operation modes |
|-------------------------|--|
| Green | System is working perfectly with optimal operating parameters |
| Yellow | Warning – Condition monitoring warnings in place; ejector system not functioning perfectly Check operating parameters |
| Orange | Warning – Serious condition monitoring warnings in place; ejector system not functioning perfectly Check operating parameters |
| rot | Error – Error code provided in parameter error; safe operation of the ejector within the operating limits is no longer ensured <ul style="list-style-type: none"> • Cease operation • Check the system |

12 Maintenance

12.1 Safety

Maintenance work may only be carried out by qualified personnel.



⚠ WARNING

Risk of injury due to incorrect maintenance or troubleshooting

- ▶ Check the proper functioning of the product, especially the safety features, after every maintenance or troubleshooting operation.



NOTE

Incorrect maintenance work

Damage to the ejector!

- ▶ Always switch off supply voltage before carrying out any maintenance work.
- ▶ Secure before switching back on.
- ▶ The ejector must only be operated with a silencer and press-in screens.

- ▶ Create atmospheric pressure in the ejector's compressed air circuit before working on the system!

12.2 Cleaning the Ejector

1. For cleaning, do not use aggressive cleaning agents such as industrial alcohol, white spirit or thinners. Only use cleaning agents with pH 7–12.
2. Remove dirt on the exterior of the device with a soft cloth and soap suds at a maximum temperature of 60° C. Make sure that the silencer is not soaked in soapy water.
3. Ensure that no moisture can reach the electrical connection or other electrical components.

12.3 Replacing the Silencer

Heavy infiltration of dust, oil, etc. may contaminate the silencer and reduce the suction capacity. Cleaning the silencer is not recommended due to the capillary effect of the porous material.

If the suction capacity decreases, replace the silencer.

- ✓ Deactivate the ejector and depressurize the pneumatic systems.
- ▶ Detach and replace the silencer.

12.4 Replacing the Press-In Screens

The vacuum and compressed air connections of the ejectors contain press-in screens. Dust, chippings and other solid materials may be deposited in the screens over time.

- ▶ If you notice that the performance of the ejectors has declined, replace the screens.

12.5 Replacement of the Device with a Parameterization Server

The IO-Link protocol provides an automated process for transferring data when a device is replaced. For this Data storage mechanism, the IO-Link master mirrors all setting parameters for the device in a separate non-volatile memory. When a device is swapped for a new one of the same type, the setting parameters for the old device are automatically saved in the new device by the master.

- ✓ The device is operated on a master with IO-Link revision 1.1 or higher.
- ✓ The Data storage feature in the configuration of the IO-Link port is activated.
 - ▶ Ensure that the new device is restored to the factory settings **before** it is connected to the IO-Link master. If necessary, reset the device to factory settings, e.g. via the operating element.
 - ⇒ The device parameters are automatically mirrored in the master when the device is configured using an IO-Link configuration tool.
 - ⇒ Changes to the parameters made in the user menu on the device or via NFC are mirrored in the master.

Changes to the parameters made by a PLC program using a function module are **not** automatically mirrored in the master.

- ▶ Manually mirroring data: After changing all the required parameters, execute ISDU write access to the System Command parameter [0x0002] using the Force upload of parameter data into the master command (numerical value 0x05) (see Data Dictionary).



Use the Parameterization server function of the IO-Link master to ensure that no data is lost when switching the device.

13 Warranty

This system is guaranteed in accordance with our general terms of trade and delivery. The same applies to spare parts, provided that these are original parts supplied by us.

We are not liable for any damage resulting from the use of non-original spare parts or accessories.

The exclusive use of original spare parts is a prerequisite for the proper functioning of the ejector and for the validity of the warranty.

Wearing parts are not covered by the warranty.

Opening the ejector will damage the "tested" labels. This voids the warranty.

14 Spare and wearing parts, accessories

14.1 Spare and Wearing Parts

Maintenance work may only be carried out by qualified personnel.



⚠ WARNING

Risk of injury due to incorrect maintenance or troubleshooting

- ▶ Check the proper functioning of the product, especially the safety features, after every maintenance or troubleshooting operation.

The following list contains the primary spare and wearing parts.

| Designation | Part no. | Type |
|--|----------------|------|
| Silencer | 10.02.02.02124 | W |
| Screw-in filter 3/8" thread <i>For base plate GP2</i> | 10.05.03.00013 | S |
| Screen 17.5x2 | 10.02.02.03378 | S |
| Suction valve for NO ejector (NO valve) | 10.05.01.00278 | S |
| Suction valve for NC ejector (NC valve) | 10.05.01.00277 | S |
| Suction valve for IMP ejector (pulse valve) | 10.05.01.00280 | S |
| Blow-off valve (NC valve) | 10.05.01.00277 | S |

| | | |
|---------|-------|--------------|
| Legend: | S ... | Spare part |
| | W ... | Wearing part |

When tightening the fastening screws on the valves, observe the maximum tightening torque of 0.7 Nm.

14.2 Accessories

| Designation | Part no. | Note |
|---|----------------|---|
| Connection cable, ASK B-M12-5 5000 K-5P | 21.04.05.00080 | Connection cable with socket, M12, 5-pin, open-ended, length: 5 m |
| Connection cable, ASK B-M12-5 1000 S-M12-5 | 21.04.05.00158 | Connection cable with socket, M12, 5-pin, for 5-pin M12 plug, length: 1 m |
| 2x base plate with Quick Change connection | 10.02.02.02154 | Base plate for mounting ejector blocks GPQ2 122x87x48 |

15 Decommissioning and Recycling

15.1 Disposing of the Ejector

1. Dispose of the product properly after replacement or decommissioning.
2. Observe the country-specific guidelines and legal obligations for waste prevention and disposal.

15.2 Materials Used

| Component | Material |
|--------------------------------|--|
| Housing | PA6-GF |
| Inner components | Aluminum alloy, anodized aluminum alloy, brass, galvanized steel, stainless-steel, PU, POM |
| Controller housing | PC, PMMA |
| Pneumatic connection adapter Q | Aluminum alloy, anodized, nickel-plated steel |
| Pneumatic connection adapter H | PA6-GF |
| Silencer housing | ABS |
| Silencer insert | Porous PE |
| Screws | Galvanized steel |
| Sealing | Nitrile rubber (NBR) |
| Lubrication | Silicone-free |

16 EC Declaration of Conformity

EC Declaration of Conformity

The manufacturer Schmalz confirms that the Ejector described in these operating instructions fulfill the following applicable EC directives:

| | |
|------------|-------------------------------|
| 2006/42/EC | Machinery Directive |
| 2014/30/EU | Electromagnetic Compatibility |

The following harmonized standards were applied:

| | |
|--------------|--|
| EN ISO 12100 | Safety of Machinery – Basic concepts, general principles for design – risk assessment |
| EN 61000-6-2 | Electromagnetic Compatibility - Immunity |
| EN 61000-6-3 | Electromagnetic Compatibility – Emission |
| EN ISO 4414 | Pneumatic fluid power – General rules and safety requirements for systems and their components |


17 Appendix

17.1 Overview of Display Codes

| Display code | Parameter | Comment |
|--------------|--|---|
| H-1 | Limit value H1 | Switch-off value for air-saving function/control |
| h-1 | Hysteresis value h1 | Hysteresis of control |
| H-2 | Limit value H2 | Activation value of "Parts control" signal output |
| h-2 | Hysteresis value h2 | Hysteresis of "Parts control" signal output |
| HP1 | Limit value H1 | Compressed air limit value |
| hP1 | Hysteresis value hP1 | Hysteresis of the compressed air value |
| tBL | Blow-off time | Setting of the blow-off time for time-controlled blow-off |
| cAL | Zero-point adjustment | Selection of the function for pressure or vacuum sensor |
| UAc | Zero-point adjustment of the vacuum sensor | Adjustment of the zero point for the vacuum sensor |
| PcS | Zero-point adjustment of the pressure sensor | Adjustment of the zero point for the pressure sensor |
| ct1 | Counter 1 | Erasable counter for suction cycles ("Suction" signal input) |
| ct2 | Counter 2 | Erasable counter for valve switching frequency |
| ct3 | Counter 3 | Erasable counter for condition monitoring events |
| rcE | Erase counters | Erases counters ct1, ct2 and ct3 |
| cc1 | Total counter 1 | Counter for suction cycles (suction signal input) |
| cc2 | Total counter 2 | Counter for valve switching frequency |
| cc3 | Total counter 3 | Counter for condition monitoring events |
| SoC | Software function | Displays the current software version |
| Snr | Serial number | Displays the serial number of the ejector |
| Art | Part number | Displays the part number of the ejector |
| un1 | Vacuum unit | Vacuum unit in which the measurement and setting values are displayed |
| bAr | Vacuum level in mbar/bar | The displayed vacuum is shown in mbar. The displayed pressure level is shown in bar. |
| PS1 | Vacuum level in psi | The displayed vacuum and pressure levels are shown in psi. |
| -iH | Vacuum in inHg | The displayed vacuum and pressure levels are shown in inches of Hg. |
| kPA | Vacuum level in kPa | The displayed vacuum and pressure levels are shown in kPa. |
| t-1 | Evacuation time | Setting for the maximum permitted evacuation time |
| -L- | Leakage value | Setting for the maximum permissible leakage in mbar/s |
| dLY | Switch-off delay | Switch-off delay setting for H1, HP1 and H2 (delay) |
| Eco | ECO mode | Setting for display ECO mode |
| ctr | Control | Setting for the air saving function (control function) |
| onS | Control function on with leakage monitoring | Switches on the air saving function with leakage monitoring |
| dcS | Deactivate auto. control shutoff | Suppresses the automatic valve protection function when set to YES. |

| Display code | Parameter | Comment |
|--------------|---------------------------------------|--|
| bLo | Blow-off function | Parameter for configuring the blow-off function |
| -E- | "External" blow-off | Selection of externally controlled blow-off |
| I-t | "Internally time-controlled" blow-off | Selection of internally controlled blow-off (triggered internally; time-adjustable) |
| E-t | "Externally time-controlled" blow-off | Selection of externally controlled blow-off (triggered externally; time-adjustable) |
| P in | PIN code | Entry of the PIN code for unlocking the menu |
| Loc | Input locked | Parameter modification locked. |
| Unc | Input enabled | The buttons and menus are unlocked. |
| dPY | Display rotation | Setting the display position (rotation) |
| Std | Default display | Display is not rotated |
| rEd | Rotated display | Display is rotated by 180° |
| rES | Reset | All values are reset to the factory settings. |
| nFc | NFC lock | On --> Input and output enabled d IS --> Completely switched off LoC --> Write-protected |

At your side worldwide

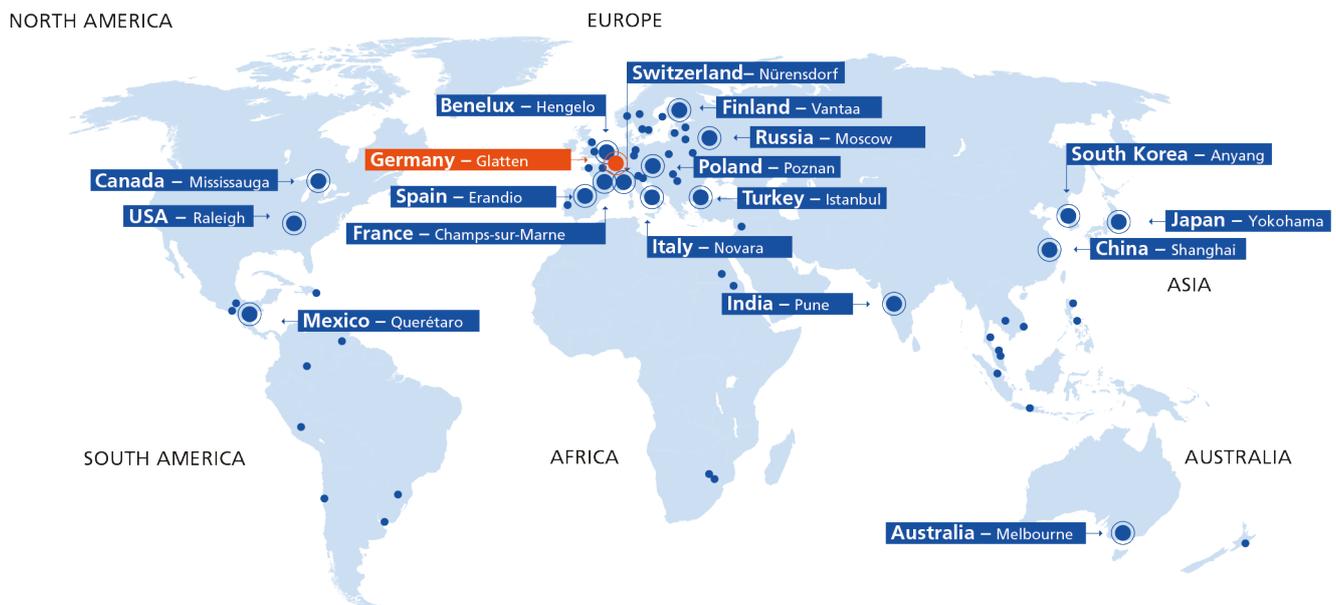

Headquarters

Schmalz Germany – Glatten

Subsidiaries

Schmalz Australia – Melbourne
 Schmalz Benelux – Hengelo (NL)
 Schmalz Canada – Mississauga
 Schmalz China – Shanghai
 Schmalz Finland – Vantaa
 Schmalz France – Champs-sur-Marne
 Schmalz India – Pune
 Schmalz Italy – Novara
 Schmalz Japan – Yokohama

Sales Partners

You can find the Schmalz sales partner in your country at:
WWW.SCHMALZ.COM/SALESNETWORK

Schmalz Mexico – Querétaro
 Schmalz Poland – Suchy Las (Poznan)
 Schmalz Russia – Moscow
 Schmalz South Korea – Anyang
 Schmalz Spain – Erandio (Vizcaya)
 Schmalz Switzerland – Nürens Dorf
 Schmalz Turkey – Istanbul
 Schmalz USA – Raleigh (NC)

Vacuum Automation

WWW.SCHMALZ.COM/AUTOMATION

Handling Systems

WWW.SCHMALZ.COM/HANDLINGSYSTEMS

J. Schmalz GmbH
 Johannes-Schmalz-Str. 1
 72293 Glatten, Germany
 T: +49 7443 2403-0
 schmalz@schmalz.de
 WWW.SCHMALZ.COM