


# LAMP® INSTRUCTION MANUAL

## PUSH KNOB (PK-03) PAT.P

◀ Be sure to read prior to installation ▶

—MORTISE TYPE—

Fig.1 Specifications

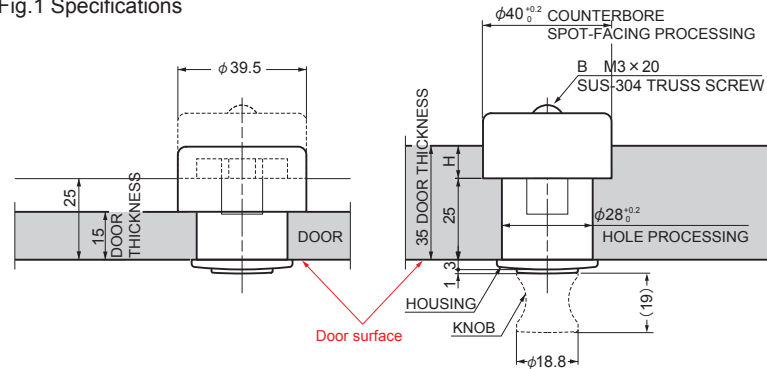

**NOTE:** The above picture shows in case of right side latching (with hinges on left side of door).  
For left side latching (with hinges on right side door) it is in symmetrical position.

### INSTALLATION PROCEDURE

If door thickness is less than 15 mm, contact our staff.


- ① Bore the hole in the specified location on the door. (Refer to Fig. 1 & 2)
- ② Push the knob into the hole from the door surface, and set the back side corner from the door's back surface, aligning with the push knob location. Fasten tightly enough to stabilize, by using the screws provided (B)M3 x 20, so that it does not shake or lash. Fastening too tight may result in damages.

**NOTE:** Figure 2 illustrates bore dimensions that must be used for the installation of doors with a thickness of 15—20 mm as well as 26—35 mm.

### HOW TO USE

A single push of the knob head will conceal it. Another push will activate the knob.

Fig.2 Bore dimensions

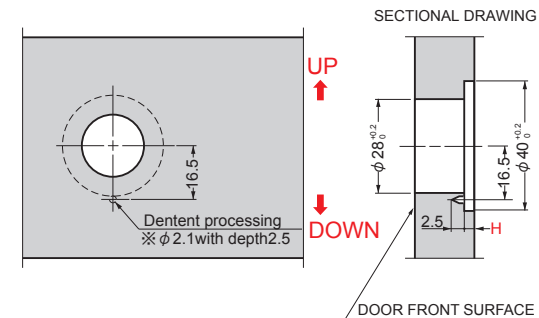

Art No.	Door thickness (mm)	H: Counterbore/ spot facing depth
PK03	15~25	H=0 (φ 28 penetration hole)
	26~35	H=Door thickness-25 (from door back surface)

Japan Head Office  
SUGATSUNE KOGYO CO.LTD.  
1-8-11, Higashikanda, Chiyodaku, Tokyo 101-8633 Japan  
Phone:813-3866-2260 Fax:813-3866-4447



U.S.Subsidiary  
SUGATSUNE AMERICA INC.  
221 East Selandia Lane, Carson, CA 90746 U.S.A.  
Phone:310-329-6373 Fax:310-329-0819  
Toll Free:1-800-562 - LAMP