



#### Setting the standard for panel mounting

# TC-06 Textile Clip Range


CLIP OPTIONS:	USE WITH:	INSTALL WITH:	REMOVE WITH:
TC-F6 TC-M6	Standard upholstery sewing machine using standard foot and needle.  Nylon thread.	TC-CP6	TC-R6

#### **INSTALLATION STEPS:**












Complete construction of cushion, insert foam etc to finish

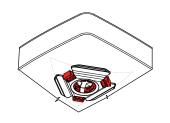


Insert TC-CP6 into TC-F6

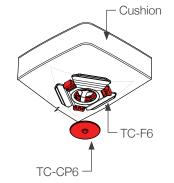


Press cushion into place, pushing down on clips firmly to mark base

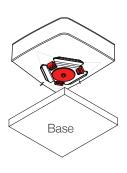


Remove cushion and drill out mark in base

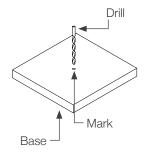

Screw on TC-M6 to base using #6 gauge CSK screw

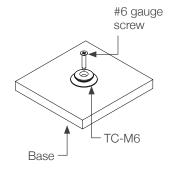

Clip cushion in place

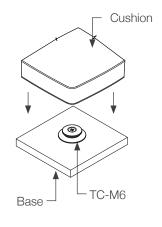




#### Setting the standard for panel mounting

## TC-06 Textile Clip Range


CLIP OPTIONS:	USE WITH:	INSTALL WITH:	REMOVE WITH:
TC-F6 TC-M6	Standard upholstery sewing machine using standard foot and needle.  Nylon thread.	TC-CP6	TC-R6

### **CUSHION REMOVAL USING REMOVAL TOOL TC-R6:**

Insert TC-R6 Removal Tool between cushion and base, locate clips and push tool inwards, to release clip.

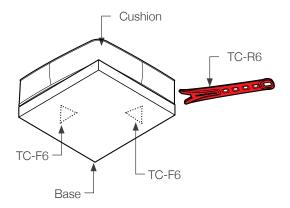



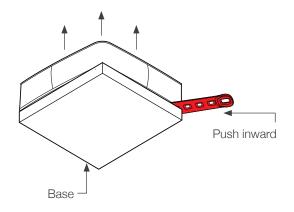

info@fastmount.com www.fastmount.com