





LP-DF8 Low Profile Drywall self tapping coarse thread female


	<p>USE WITH:</p> <p>LP-M8 LP-SM8</p> 	<p>INSTALL WITH:</p>  <p>25ø hole saw</p>
<p>INSTALLATION STEPS (see reverse for more options)</p>		

- 1** Drill 25ø hole in drywall plasterboard

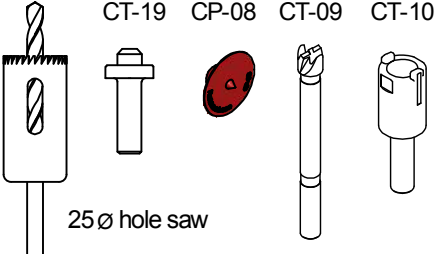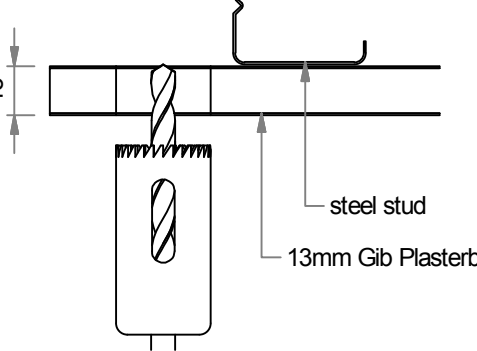

13mm Gib Plasterboard


steel stud
- 2** Screw LP-DF8 into drywall

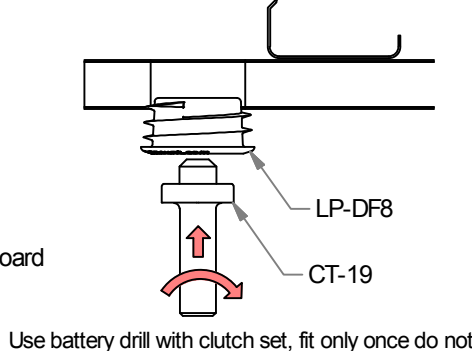

LP-DF8


CT-19


Use battery drill with clutch set, fit only once do not over tighten
- 3** Fit CP-08 centre point into LP-DF8

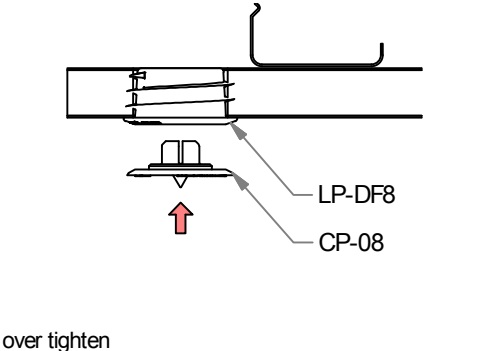

LP-DF8


CP-08
- 4** Press panel onto CP-08 to mark

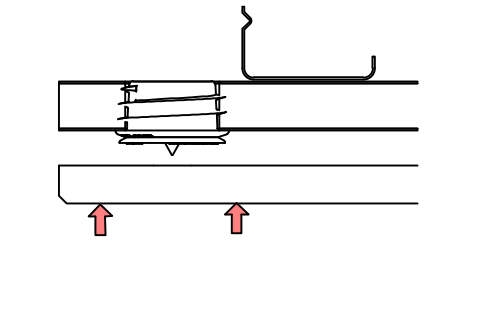
- 5** Drill panel on mark with CT-09

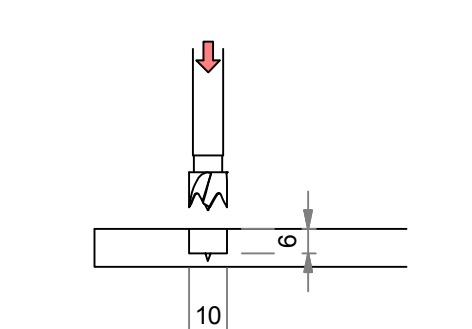

10

6
- 6** Screw fit LP-M8 with CT-10

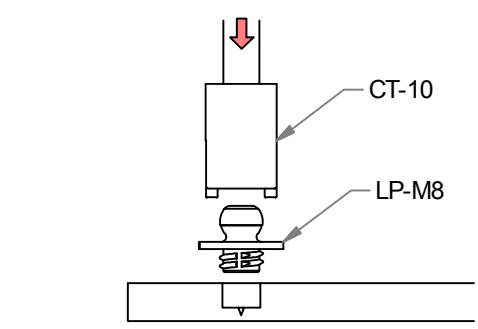

CT-10

LP-M8

Use battery drill with clutch set

A Cutaway view of installed clip

