

NOTES:

A. MATERIAL AND FINISH:
-XX = -50 OR -60

27-99-126-50:

HOUSING, SCREW, TRIM NUT: STAINLESS STEEL,
BLACK ORGANIC COATING


O-RING: BUNA N, NATURAL
PAWL, SPRING, HEX NUT: STAINLESS STEEL, PASSIVATED
BUSHING: BRASS, NATURAL

27-99-126-60:

HOUSING, SCREW, TRIM NUT: STAINLESS STEEL, BLACK OXIDE
O-RING: BUNA N, NATURAL
PAWL, SPRING, HEX NUT: STAINLESS STEEL, PASSIVATED
BUSHING: BRASS, NATURAL

B. INSTALLATION:

1. INSTALL LATCH FROM BACK OF PANEL.
2. SLIP TRIM NUT OVER KNOB AND FINGER TIGHTEN AGAINST PANEL.
3. WITH PAWL IN LATCHED POSITION, TIGHTEN HEX NUT
HARD AGAINST BACK OF PANEL WITH 3/8" END WRENCH.

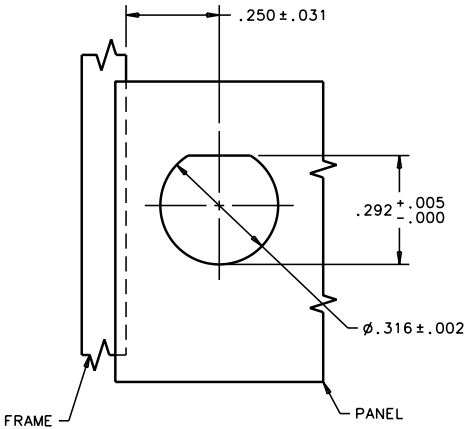

PANEL PREPARATION

southco			PROPRIETARY ITEM - EXCEPT FOR USES EXPRESSLY GRANTED IN WRITING INFORMATION DISCLOSED HEREON IS CONFIDENTIAL AND ALL RIGHTS PATENT AND OTHERWISE ARE RESERVED BY SOUTHCO, INC.				SPECIAL No. 27 FASTENER ASSEMBLY LEFT HAND				DATE	DRAWN	CHKD	SCALE	DRAWING NUMBER
											8-13-79	ESK		3:1	27-N-126-50-J
REV	DATE	DRAWN/CHKD	DESCRIPTION	ITEM	PART NUMBER	MATERIAL	FINISH	INCHES							
1	05DEC2006	RLR/MDY	PRN: P2006-1702	ASSEMBLY	27-99-126-XX	-	-	ALL DIMENSIONS WITHOUT TOLERANCES ARE FOR REFERENCE ONLY.							
				SCREW ASSEMBLY	-	SEE NOTE A	SEE NOTE A								
				HOUSING	-										
				PAWL	-										
				SPRING	-										
				TRIM NUT	-										
				HEX NUT	-			 B PAPER SIZE							
				BUSHING	-										
THIRD ANGLE PROJECTION															

